



What You Will Need




Stud Finder



Pencil



Level

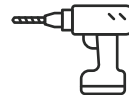

Drill & Drill Bit



Screwdriver

1

Locate Wall Studs

For shelves intended to hold a lot of weight or added support, install directly into wall studs. Use a stud finder to locate studs in the desired area and lightly mark them with a pencil. If no studs are present, wall anchors will be required (**see Step 3**).

2

Mark Shelf & Bracket Placement

Hold the shelf in the desired position and lightly trace its outline on the wall. Set the shelf aside, then align the bracket within the outline. Match the bracket's screw holes with any marked studs when possible. Mark the screw hole locations on the wall.

3

Drill Bracket Holes

Using a drill bit that matches the screw size, drill holes at the marked locations. Use wall anchors when installing into drywall or plaster without a stud. Wall anchors are not needed when drilling directly into studs.

4

Install the Bracket

Position the bracket over the drilled holes and partially screw it into the wall. Use a level to ensure it is straight, then fully tighten the screws once level.

5

Install the Shelf

Slide the shelf onto the bracket extensions through the holes in the back of the shelf until fully seated. If your bracket includes a locking or set screw, install it now to secure the shelf in place.