



# Assembly Guide Manual

## Please Note:

These instructions apply only to the following cabinet lines:

- Gunnison Shaker
- Cinder Shaker
- Artisan Shaker
- Stone Gray Shaker
- Frosted White Shaker
- Timber Mist
- Timber Toffee
- Timber White
- Timber Green
- Natural Shaker
- Black Shaker

If your cabinets are not listed above, please refer to the appropriate instructions for your specific product line.

## Full Height Door Base

### ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel


STEP 2: Joint bottom panel with side panel

STEP 3: Joint side panel with bottom & back panel

STEP 4: Attach frame on and toekick board

STEP 5: Attach the wood block on the top corner

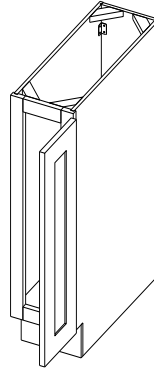







STEP 6: Fix door onto the frame and adjust the cover-space








### PARTS LIST


NO.	Description	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	TOP&BOTTOM PANEL	1
D	FACE FRAME	1
E	TOE KICK	1
F	CABINETS DOOR	1

### HARDWARE LIST

NO.	Description	QTY	PICTURE
8	1 1/2" SOFTCLOSE HINGE	2	 1 1/2" hinge
7	3/4" ROUND HEAD SCREW	2	 3/4" round head screw
6	BUMPER	2	 Bumper
5	9/16" ROUND HEAD SCREW	40	 9/16" round head screw
4	CLEAT	10	 Cleat
3	1" FLAT HEAD SCREW FOR CARCASS	2	 1" flat head screw
2	WOOD BLOCK	4	 Wood block
1	1" FLAT HEAD SCREW FOR WOOD BLOCK	8	 1" flat head screw

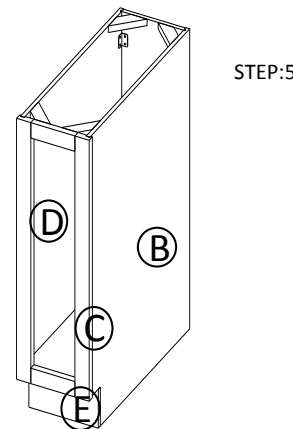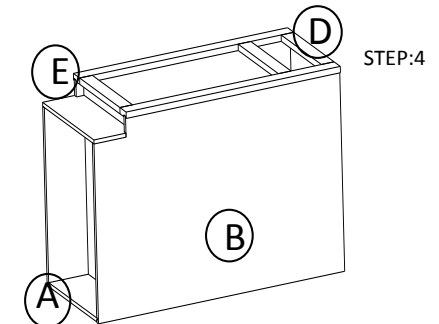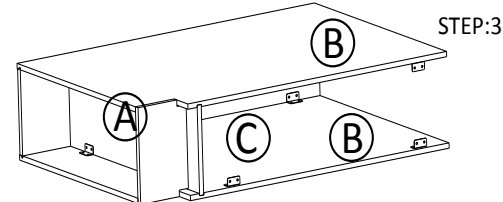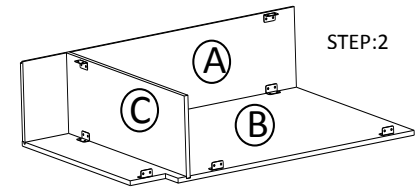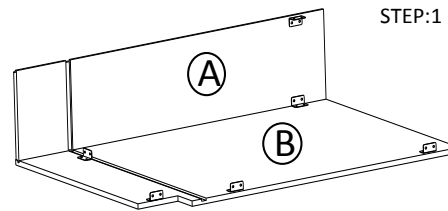

STEP:6

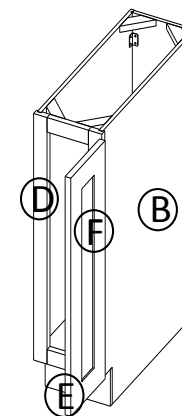

## Single Door/Single Drawer Base Cabinet

### ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel

STEP 2: Joint bottom panel with side panel

STEP 3: Joint side panel with bottom & back panel












STEP 4: Attach frame on and toekick board

STEP 5: Joint the drawer together, then install the drawer guide.



STEP 6: Attach the wood block on the top corner, and put on the adjustable shelf

STEP 7: Fix drawer head on the drawer front and fix door onto the frame and adjust the cover-space


### HARDWARE LIST

NO.	Description	QTY	PICTURE
11	1 1/2" SOFTCLOSE HINGE	2	
10	3/4" ROUND HEAD SCREW	2	
9	BUMPER	6	
8	1" ROUND HEAD SCREW	4	
7	Selfclose slider	1	
6	SHELF CLIP	4	
5	9/16" ROUND HEAD SCREW	40	
4	CLEAT	10	
3	1" FLAT HEAD SCREW FOR CARCASS	2	
2	WOOD BLOCK	4	
1	1" FLAT HEAD SCREW FOR WOOD BLOCK	8	


PARTS LIST		
NO.	Description	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	TOP&BOTTOM PANEL	1
D	TOE KICK	1
E	FACE FRAME	1
F	DRAWER BOX FRONT AND BACK	2
G	DRAWER BOX SIDE	2
H	DRAWER BOX BOTTOM	1
I	ADJUSTABLE SHELF	1
J	DRAWER HEAD	1
K	CABINETS DOOR	1

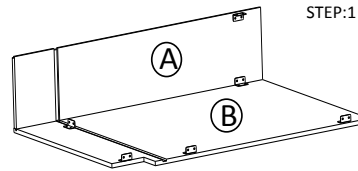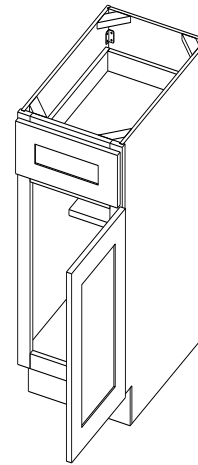


STEP:1

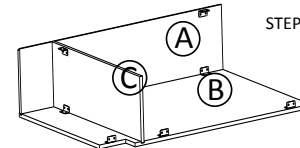


STEP:2

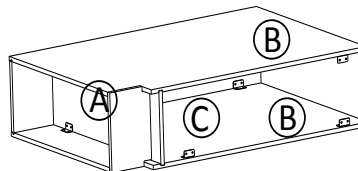


STEP:3

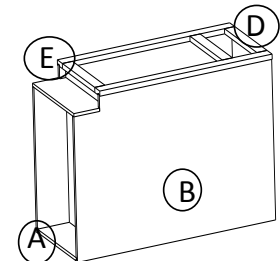


STEP:4

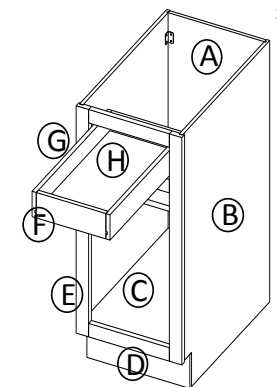

STEP:5

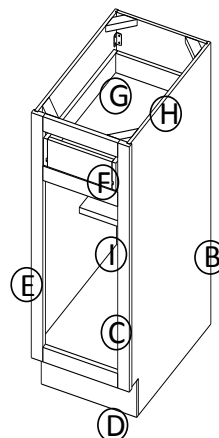


STEP:6

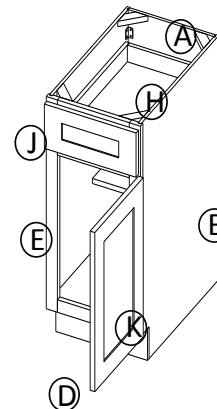


STEP:7

Full extension concealed drawer runners

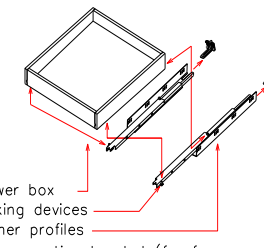

Drawer box  
Locking devices  
Runner profiles  
Rear mounting brackets(for frame applications)

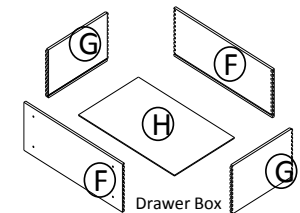

# Double Door Single Drawer Base ASSEMBLY INSTRUCTIONS

## Getting started:

prepare a protection layer, a screwdriver

STEP 1 : Joint side panel with back panel

STEP 2 : Joint bottom panel with side panel

STEP 3 : Joint side panel with bottom & back panel

STEP 4 : Attach frame on and toekick board


STEP 5 : Joint the drawer together, then install the drawer guide.

STEP 6 : Attach the wood block on the top corner, and put on the adjustable shelf


STEP 7 : Fix drawer head on the drawer front and fix door onto the frame and adjust the cover-space

## HARDWARE LIST


NO.	Description	QTY	PICTURE
11	SOFT CLOSE HINGE	4	
10	3/4" ROUND HEAD SCREW	4	 3/4" round head screw
9	BUMPER	8	 Bumper
8	1" ROUND HEAD SCREW	4	 1" round head screw
7	Selfclose slider	1	 Selfclose slider
6	SHELF CLIP	4	 Shelf clip
5	9/16" ROUND HEAD SCREW	44	 9/16" round head screw
4	CLEAT	11	 Cleat
3	1" FLAT HEAD SCREW FOR CARCASS	3	 1" flat head screw
2	WOOD BLOCK	4	 Wood block
1	1" FLAT HEAD SCREW FOR WOOD BLOCK	8	 1" flat head screw

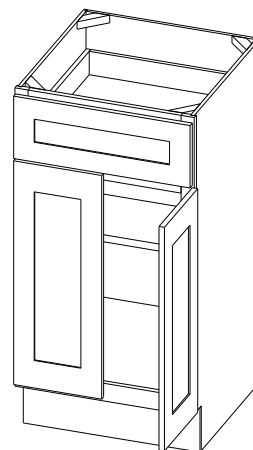


PARTS LIST		
NO.	Description	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	TOP&BOTTOM PANEL	1
D	TOE KICK	1
E	FACE FRAME	1
F	DRAWER BOX FRONT AND BACK	2
G	DRAWER BOX SIDE	2
H	DRAWER BOX BOTTOM	1
I	ADJUSTABLE SHELF	1
J	DRAWER HEAD	1
K	CABINETS DOOR	2

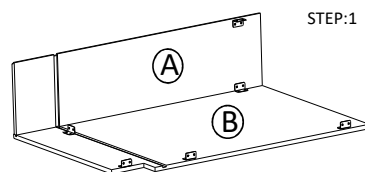


STEP:1

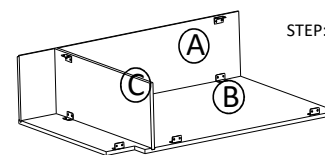


STEP:2

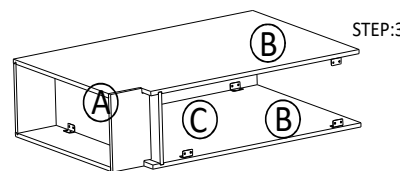



STEP:3

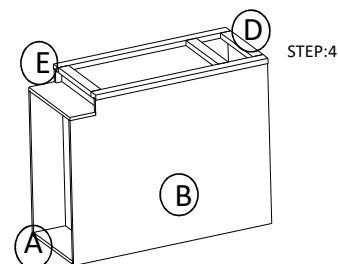


STEP:4

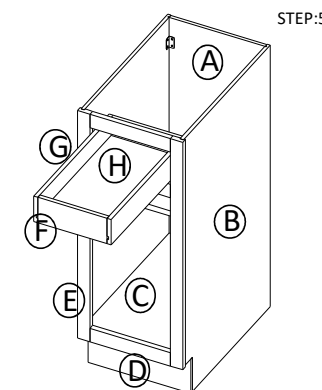

STEP:5

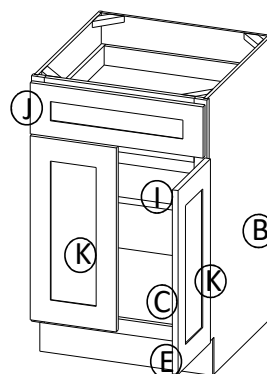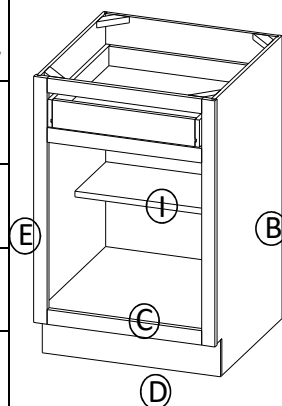

Full extension concealed drawer runners

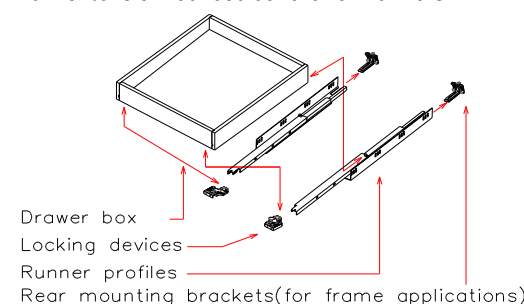

## Double Door Double Drawer Base Cabinet

### ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel

STEP 2: Joint bottom panel with side panel


STEP 3: Joint side panel with bottom & back panel

STEP 4: Attach frame on and toekick board

STEP 5: Joint the drawer together, then install the drawer guide.

STEP 6: Attach the wood block on the top corner, and put on the adjustable shelf



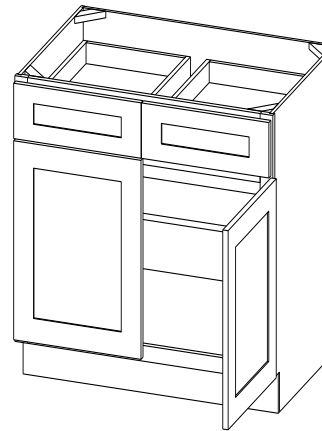






STEP 7: Fix drawer head on the drawer front and fix door onto the frame and adjust the cover-space




### PARTS LIST


NO.	Description	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	TOP&BOTTOM PANEL	1
D	TOE KICK	1
E	FACE FRAME	1
F	DRAWER BOX FRONT AND BACK	4
G	DRAWER BOX SIDE	4
H	DRAWER BOX BOTTOM	2
I	ADJUSTABLE SHELF	1
J	DRAWER HEAD	2
K	CABINETS DOOR	2

### HARDWARE LIST


NO.	Description	QTY	PICTURE
11	1 1/2" SOFTCLOSE HINGE	4	
10	3/4" ROUND HEAD SCREW	4	
9	BUMPER	12	
8	1" ROUND HEAD SCREW	8	
7	Selfclose slider	2	
6	SHELF CLIP	4	
5	9/16" ROUND HEAD SCREW	44	
4	CLEAT	11	
3	1" FLAT HEAD SCREW FOR CARCASS	4	
2	WOOD BLOCK	4	
1	1" FLAT HEAD SCREW FOR WOOD BLOCK	8	

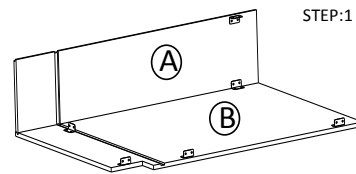


STEP:1

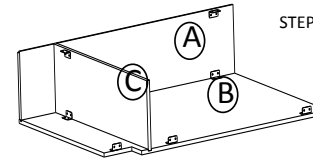


STEP:2

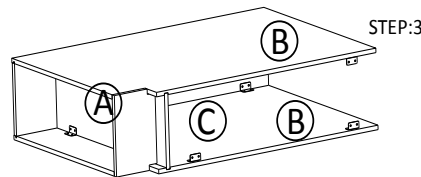


STEP:3

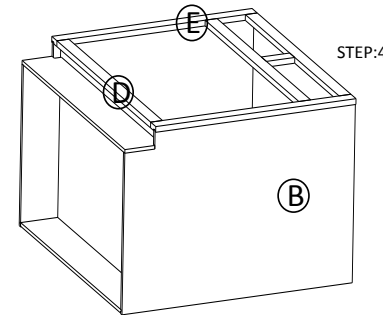


STEP:4

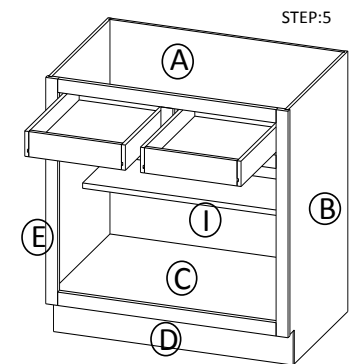


STEP:5

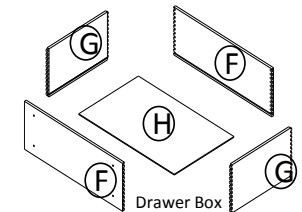

Drawer Box

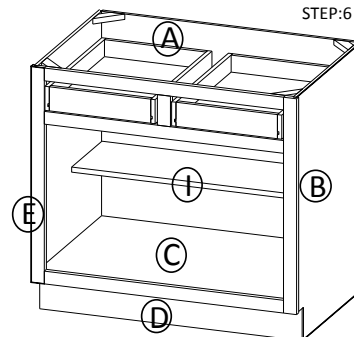


STEP:6

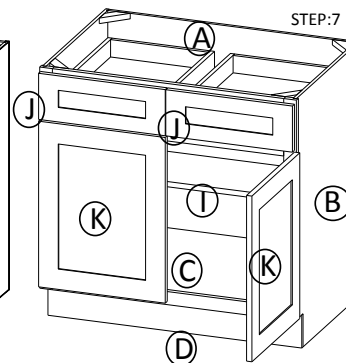

STEP:7

Full extension concealed drawer runners

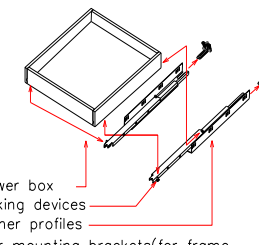

Drawer box  
Locking devices  
Runner profiles  
Rear mounting brackets (for frame applications)

## Sink Base/Vanity Sink Base

### ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel


STEP 2: Joint bottom panel with side panel

STEP 3: Joint side panel with bottom & back panel

STEP 4: Attach frame on and toekick board

STEP 5: Attach the wood block on the top corner




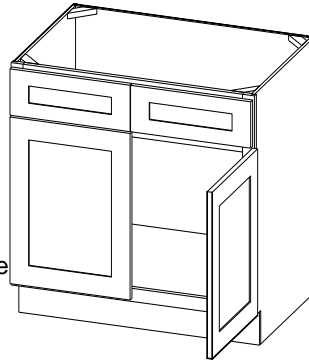




STEP 6: Fix door&drawer head onto the frame and adjust the cover-space









### PARTS LIST

NO.	Description	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	TOP&BOTTOM PANEL	1
D	TOE KICK	1
E	FACE FRAME	1
F	DRAWER HEAD	2
G	CABINETS DOOR	2

### HARDWARE LIST

NO.	Description	QTY	PICTURE
8	1 1/2" SOFTCLOSE HINGE	4	 1 1/2" hinge
7	3/4" ROUND HEAD SCREW	4	 3/4" round head screw
6	BUMPER	4	 Bumper
5	9/16"ROUND HEAD SCREW	44	 9/16" round head screw
4	CLEAT	11	 Cleat
3	1"FLAT HEAD SCREW FOR CARCASS	4	 1" flat head screw
2	WOOD BLOCK	4	 Wood block
1	1" FLAT HEAD SCREW FOR WOOD BLOCK	8	 1" flat head screw

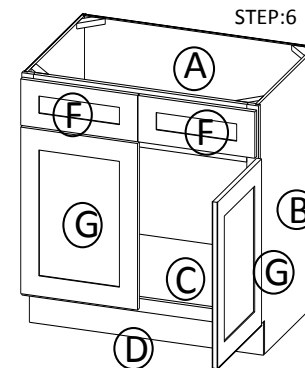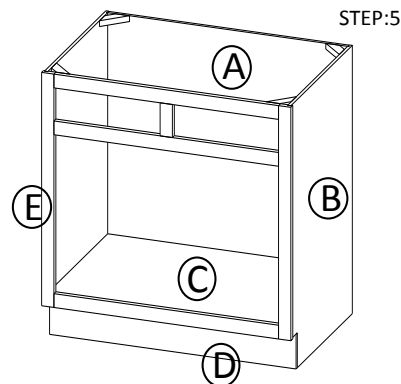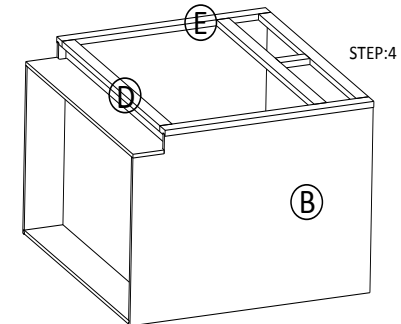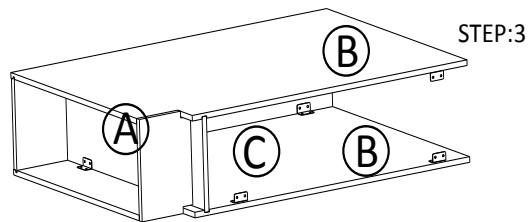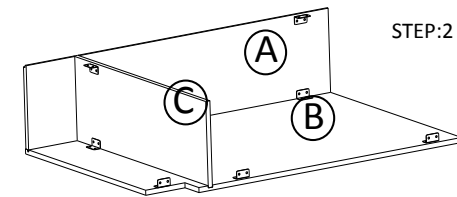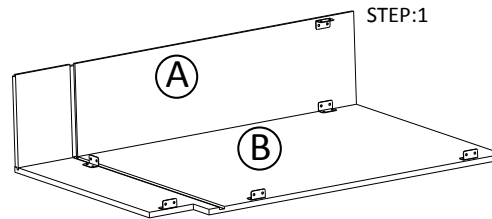



## Farm Sink Base

### ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel


STEP 2: Joint bottom panel with side panel

STEP 3: Joint side panel with bottom & back panel

STEP 4: Attach frame on and toekick board

STEP 5: Attach the wood block on the top corner




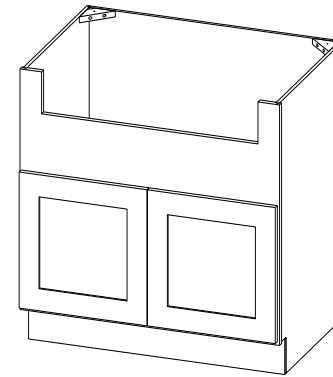




STEP 6: Fix door&drawer head onto the frame and adjust the cover-space









### PARTS LIST

NO.	Description	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	TOP&BOTTOM PANEL	1
D	TOE KICK	1
E	FACE FRAME	1
F	DRAWER HEAD	2
G	CABINETS DOOR	2

### HARDWARE LIST

NO.	Description	QTY	PICTURE
8	HINGE	4	
7	3/4" ROUND HEAD SCREW	4	 3/4" round head screw
6	BUMPER	4	 Bumper
5	9/16" ROUND HEAD SCREW	44	 9/16" round head screw
4	CLEAT	11	 Cleat
3	1" FLAT HEAD SCREW FOR CARCASS	4	 1" flat head screw
2	WOOD BLOCK	4	 Wood block
1	1" FLAT HEAD SCREW FOR WOOD BLOCK	8	 1" flat head screw

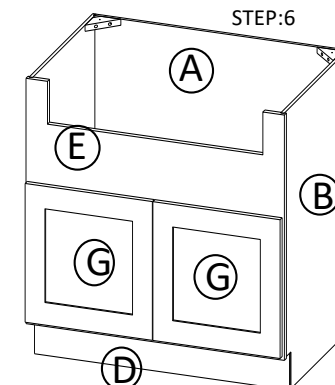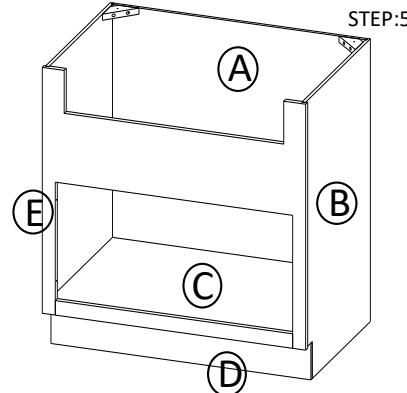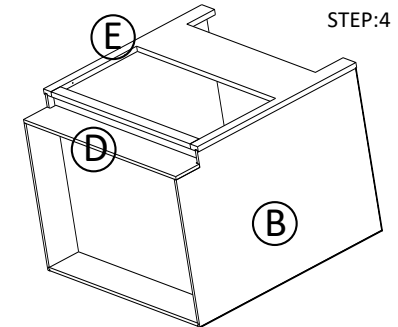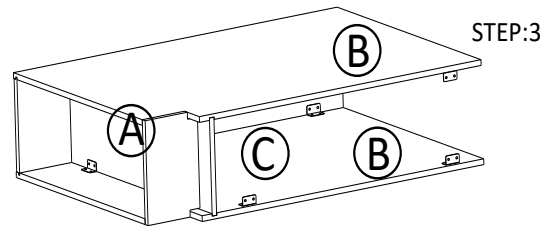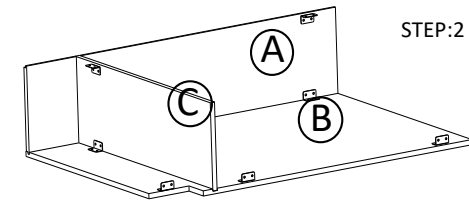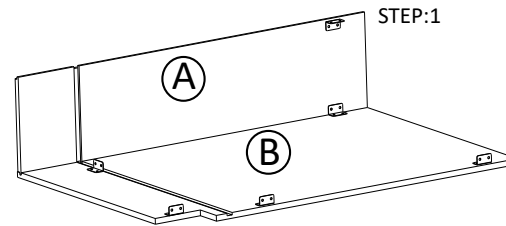

## Two Drawer Base

### ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel

STEP 2: Joint bottom panel with side panel

STEP 3: Joint side panel with bottom & back panel









STEP 4: Attach frame on and toekick board

STEP 5: Joint the drawer together, then install the drawer guide.



STEP 6: Attach the wood block on the top corner, and put on the adjustable shelf

STEP 7: Fix drawer head on the drawer front and adjust the cover-space

### HARDWARE LIST

NO.	Description	QTY	PICTURE
8	BUMPER	8	
7	1" ROUND HEAD SCREW	8	
6	21" SELFCLOSE SLIDE	2	
5	9/16" ROUND HEAD SCREW	40	
4	CLEAT	10	
3	1" FLAT HEAD SCREW FOR CARCASS	2	
2	WOOD BLOCK	4	
1	1" FLAT HEAD SCREW FOR WOOD BLOCK	8	

PARTS LIST		
NO.	Description	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	TOP&BOTTOM PANEL	1
D	TOE KICK	1
E	FACE FRAME	1
F	DRAWER BOX FRONT AND BACK	4
G	DRAWER BOX SIDE	4
H	DRAWER BOX BOTTOM	2
I	DRAWER HEAD	2

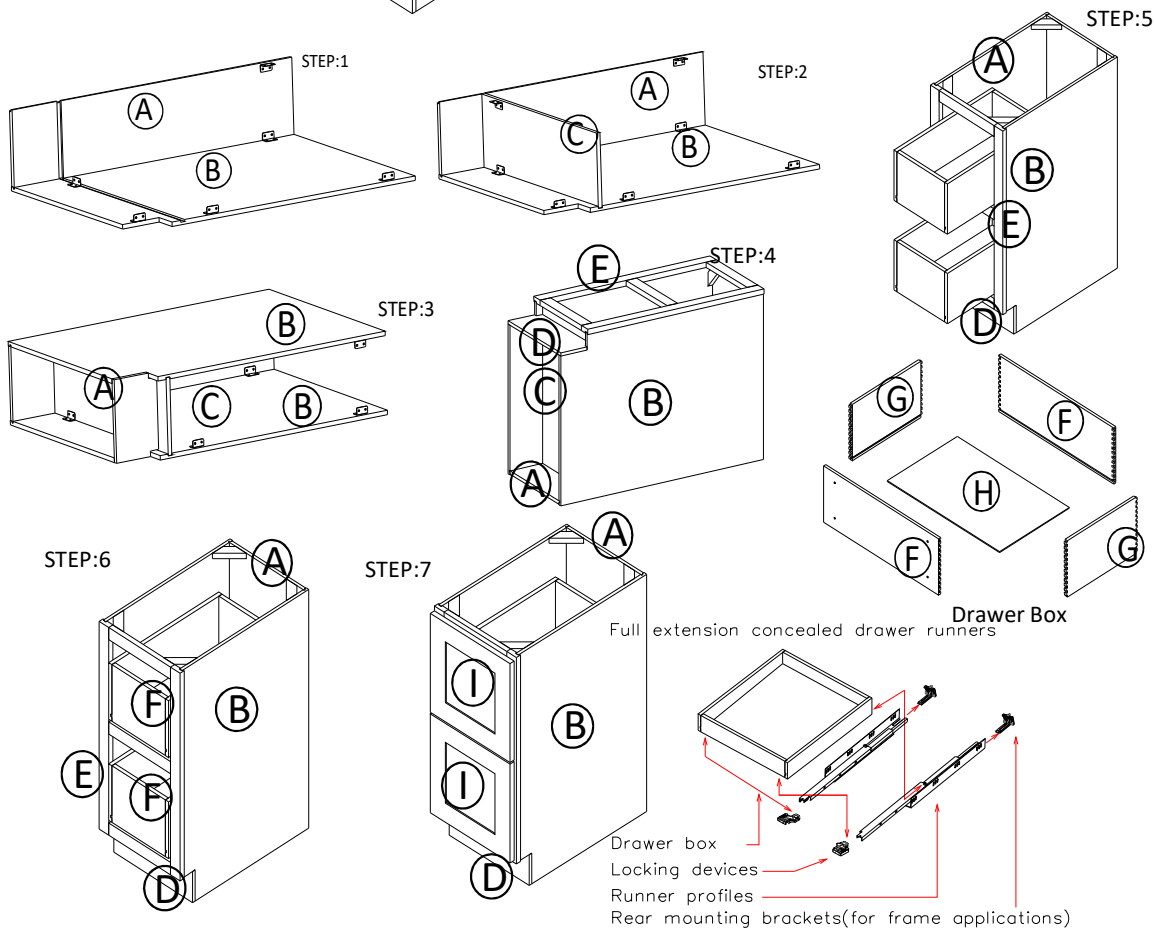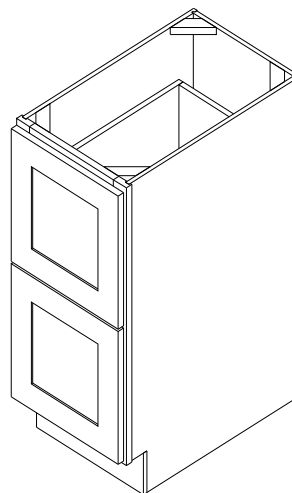



## Three Drawer Base

### ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel

STEP 2: Joint bottom panel with side panel

STEP 3: Joint side panel with bottom & back panel









STEP 4: Attach frame on and toekick board

STEP 5: Joint the drawer together, then install the drawer guide.

STEP 6: Attach the wood block on the top corner, and put on the adjustable shelf



STEP 7: Fix drawer head on the drawer front and adjust the cover-space

### HARDWARE LIST

NO.	Description	QTY	PICTURE
8	BUMPER	12	
7	1" ROUND HEAD SCREW	12	
6	21" SELFCLOSE SLIDE	3	
5	9/16" ROUND HEAD SCREW	40	
4	CLEAT	10	
3	1" FLAT HEAD SCREW FOR CARCASS	2	
2	WOOD BLOCK	4	
1	1" FLAT HEAD SCREW FOR WOOD BLOCK	8	

### PARTS LIST

NO.	Description	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	TOP&BOTTOM PANEL	1
D	TOE KICK	1
E	FACE FRAME	1
F	DRAWER BOX FRONT AND BACK	6
G	DRAWER BOX SIDE	6
H	DRAWER BOX BOTTOM	3
I	DRAWER HEAD	3

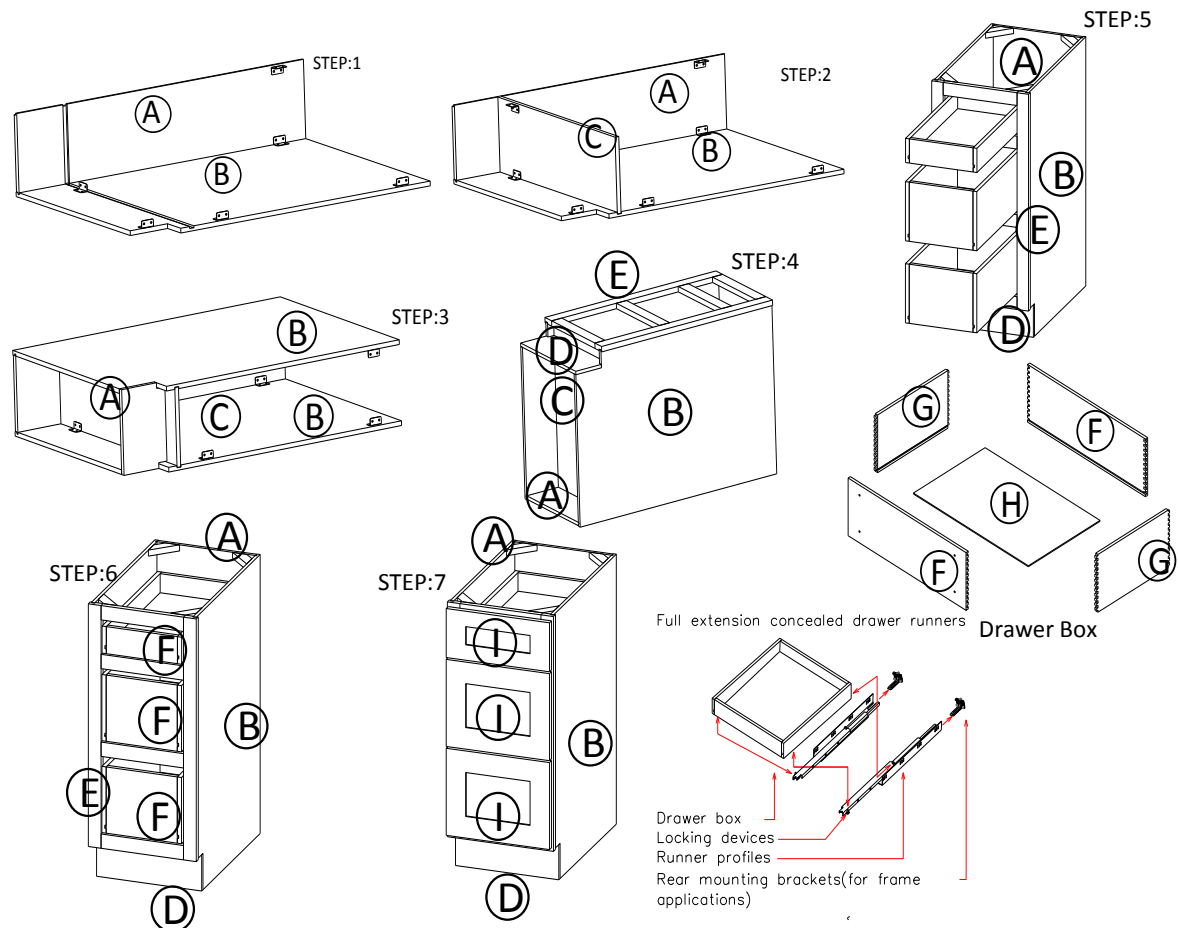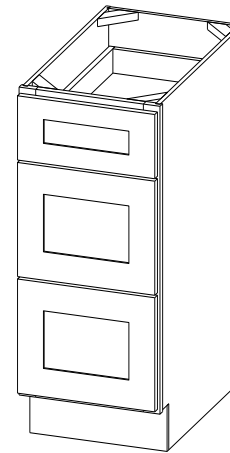

## Base Easy Reach

### ASSEMBLY INSTRUCTIONS

#### Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint right side panel with right back panel

STEP 2: Fix the bottom panel on

STEP 3: Joint right side panel with right back panel

STEP 4: Attach toe-kick on

STEP 5: turn the carcass stand


STEP 6: Attach face frame(long and short), then screw up

STEP 7: Attach top panel using screw

STEP 8: Insert back panel through the groove



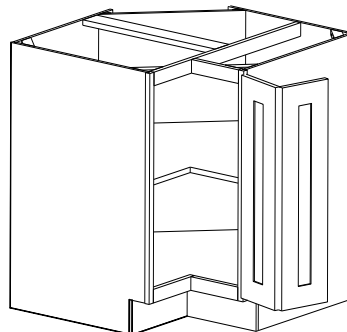








STEP 9: Install the wood block corner


STEP 10: Hinge the door onto the face frame and adjust the cover-space




PARTS LIST		
NO.	Description	QTY
A	SIDE PANEL	2
B	BACK PANEL	2
C	TOP&BOTTOM PANEL	1
D	TOE KICK	1
E	TOE KICK	1
F	FACE FRAME	1
G	FACE FRAME	1
H	CONNECT STRIP	1
I	BACK PANEL	1
J	ADJUSTABLE SHELF	1
K	CABINETS DOOR	2

#### HARDWARE LIST


NO.	Description	QTY	PICTURE
11	135 DEGREE HINGE	2	
10	3/4" ROUND HEAD SCREW	8	
9	BUMPER	4	
8	165 DEGREE HINGE	2	
7	SHELF CLIP	6	
6	9/16"ROUND HEAD SCREW	72	
5	DOWEL	6	
4	1"FLAT HEAD SCREW FOR CARCASS	11	
3	CLEAT	18	
2	WOOD BLOCK	4	
1	1" FLAT HEAD SCREW FOR WOOD BLOCK	8	

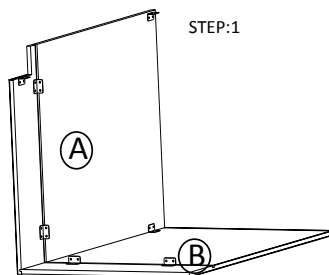


STEP:1

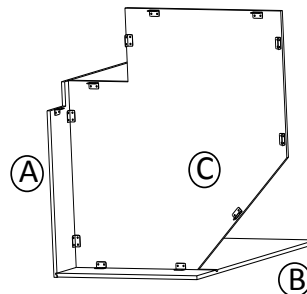


STEP:2

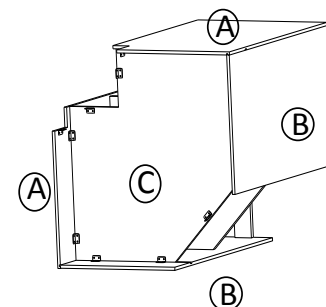


STEP:3

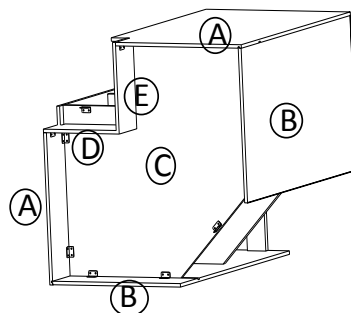


STEP:4

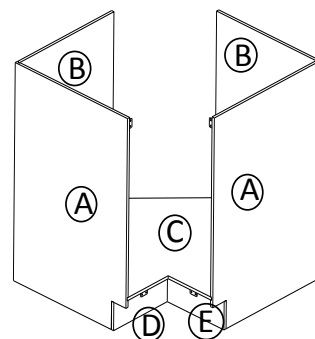


STEP:5

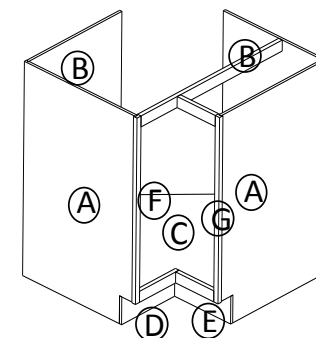


STEP:6

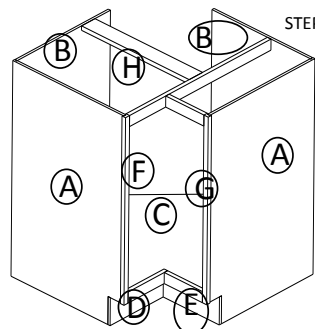


STEP:7

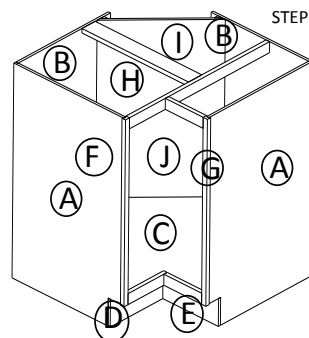

STEP:8

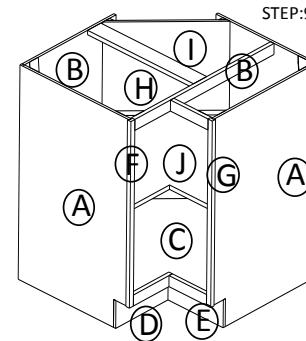

STEP:9

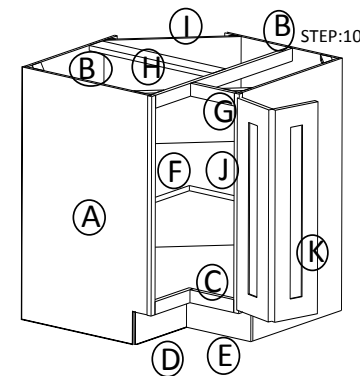

STEP:10

## Blind Base

### ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel

STEP 2: Joint bottom panel with side panel


STEP 3: Joint side panel with bottom & back panel

STEP 4: Attach frame on and toekick board

STEP 5: Joint the drawer together, then install the drawer guide.






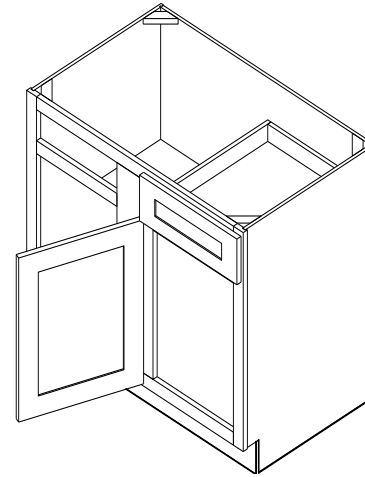




STEP 6: Attach the wood block on the top corner, and put on the adjustable shelf


STEP 7: Fix drawer head on the drawer front and fix door onto the frame and adjust the cover-space



PARTS LIST		
NO.	Description	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	TOP&BOTTOM PANEL	1
D	TOE KICK	1
E	FACE FRAME	1
F	DRAWER BOX FRONT AND BACK	2
G	DRAWER BOX SIDE	2
H	DRAWER BOX BOTTOM	1
I	ADJUSTABLE SHELF	1
J	CABINETS DOOR	1
K	DRAWER HEAD	1

### HARDWARE LIST

NO.	Description	QTY	PICTURE
11	1 1/2" SOFTCLOSE HINGE	2	
10	3/4" ROUND HEAD SCREW	2	
9	BUMPER	6	
8	1" ROUND HEAD SCREW	4	
7	Selfclose slider	1	
6	SHELF CLIP	4	
5	9/16"ROUND HEAD SCREW	44	
4	CLEAT	11	
3	1"FLAT HEAD SCREW FOR CARCASS	5	
2	WOOD BLOCK	4	
1	1" FLAT HEAD SCREW FOR WOOD BLOCK	8	

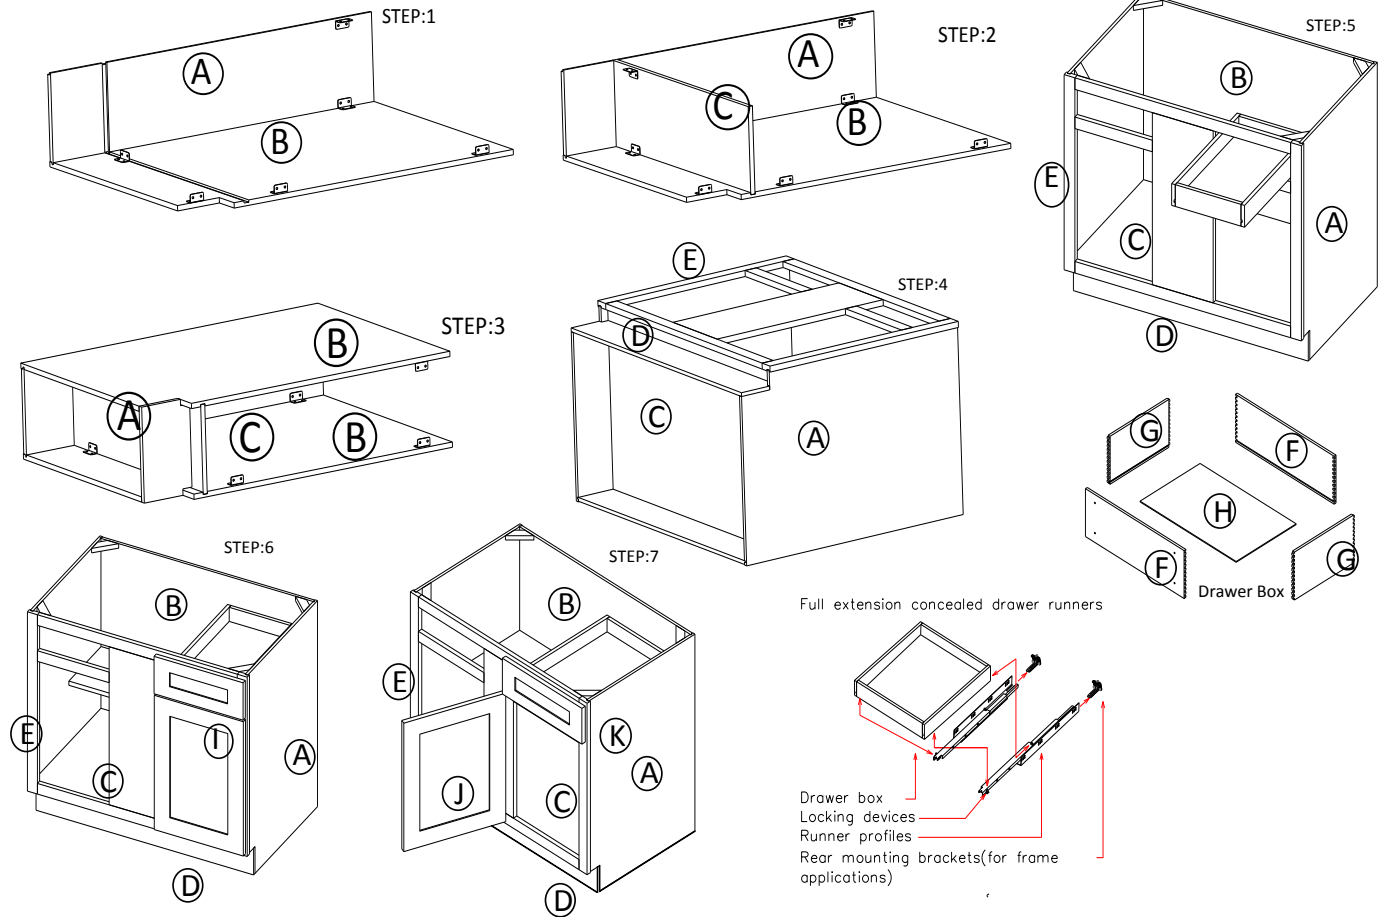

## Base End Cabinet

### ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint two side panel together

STEP 2: Attach top panel


STEP 3: Attach bottom panel

STEP 4: Attach toekick on

STEP 5: Attach frame on

STEP 6: Put on the adjustable shelves

STEP 7: Hinge the door onto the face frame and adjust the cover-space

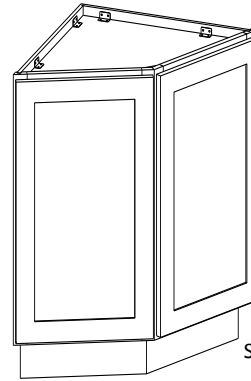










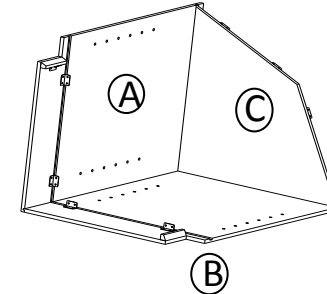
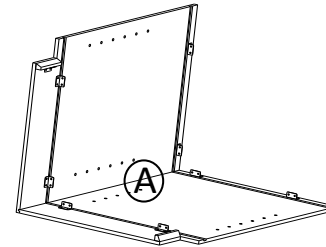
STEP:1

### PARTS LIST


NO.	Description	QTY
A	SIDE PANEL	1
B	SIDE PANEL	1
C	TOP&BOTTOM PANEL	2
D	TOE KICK	2
E	FACE FRAME	2
F	ADJUSTABLE SHELF	2
G	CABINETS DOOR	2

### HARDWARE LIST


NO.	Description	QTY	PICTURE
9	Wood Block	2	 wood block
8	135 DEGREE ANGLE	3	 135° angle
7	1 1/2" SOFTCLOSE HINGE	4	 1 1/2" hinge
6	3/4" ROUND HEAD SCREW	4	 3/4" round head screw
5	BUMPER	4	 Bumper
4	SHELF CLIP	12	 Shelf clip
3	9/16"ROUND HEAD SCREW	78	 9/16" round head screw
2	CLEAT	18	 Cleat
1	1"FLAT HEAD SCREW FOR CARCASS	5	 1" flat head screw




STEP:2

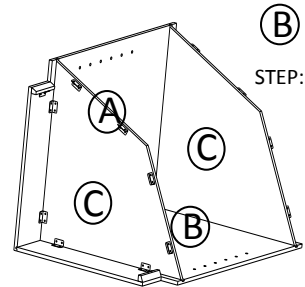


STEP:3

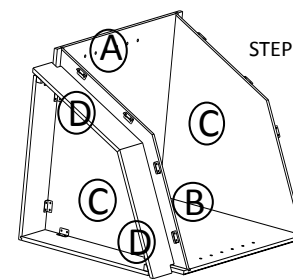


STEP:4

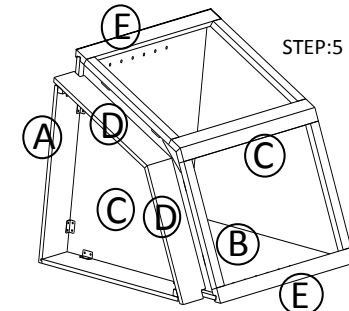

STEP:5

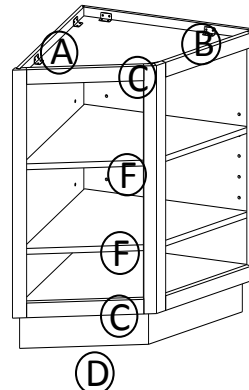

STEP:6

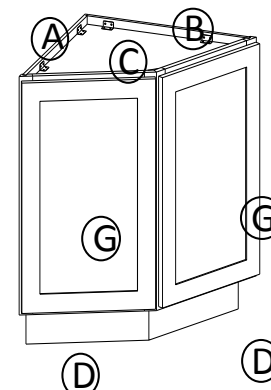

STEP:7

## Base Microwave

### ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel

STEP 2: Joint bottom panel with side panel

STEP 3: Joint side panel with bottom & back panel



STEP 4: Attach frame on and toekick board

STEP 5: Attach the wood block on the top corner.


STEP 6: Joint the drawer together, then install the drawer guide.

STEP 7: Fix drawer head on the drawer front and adjust the cover-space

PARTS LIST		
NO.	Description	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	TOP&BOTTOM PANEL	2
D	TOE KICK	1
E	FACE FRAME	1
F	DRAWER BOX FRONT AND BACK	2
G	DRAWER BOX SIDE	2
H	DRAWER BOX BOTTOM	1
I	DRAWER HEAD	1

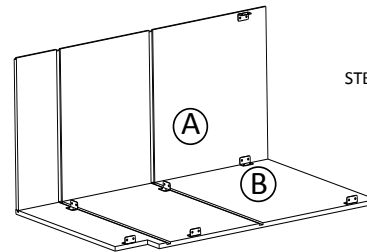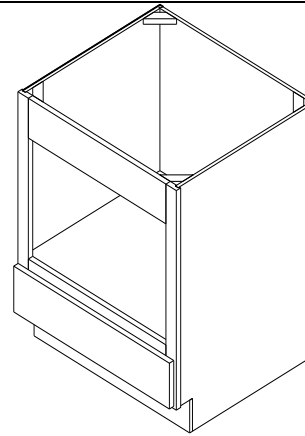


STEP:1


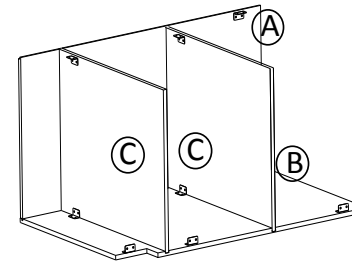


STEP:2


STEP:3

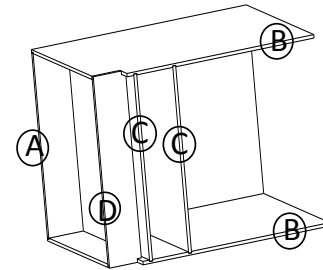


STEP:4

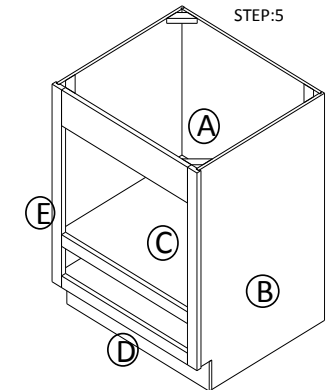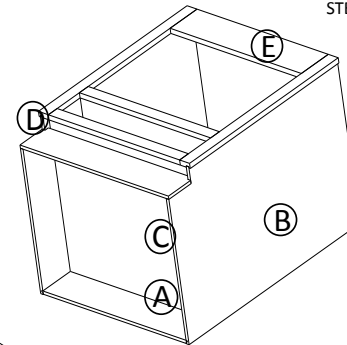


STEP:5

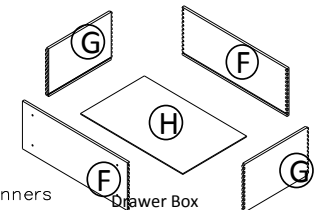

Drawer Box

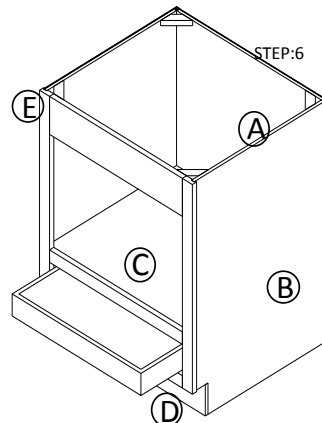


STEP:6

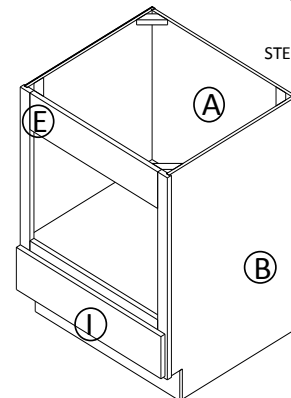

STEP:7

Full extension concealed drawer runners

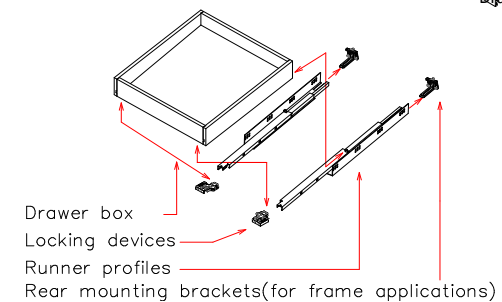








Drawer box

Locking devices

Runner profiles

Rear mounting brackets(for frame applications)

### HARDWARE LIST

NO.	Description	QTY	PICTURE
7	BUMPER	4	
6	Selfclose slider	1	
5	9/16" ROUND HEAD SCREW	56	
4	CLEAT	14	
3	1" FLAT HEAD SCREW FOR CARCASS	4	
2	WOOD BLOCK	4	
1	1" FLAT HEAD SCREW FOR WOOD BLOCK	8	

## Drawer File Base

### ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel

STEP 2: Joint bottom panel with side panel


STEP 3: Joint side panel with bottom & back panel

STEP 4: Attach frame on and toekick board

STEP 5: Attach the wood block on the top corner

STEP 6: Joint the drawer together, then install the drawer guide

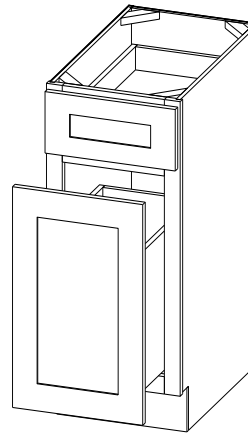







STEP 7: Fix drawer head on the drawer front and adjust the cover-space









### PARTS LIST


NO.	Description	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	TOP&BOTTOM PANEL	1
D	TOE KICK	1
E	FACE FRAME	1
F	DRAWER BOX FRONT AND BACK	4
G	DRAWER BOX SIDE	4
H	DRAWER BOX BOTTOM	2
I	DRAWER HEAD	1
J	DOOR	1

### HARDWARE LIST

NO.	Description	QTY	PICTURE
8	BUMPER	8	 Bumper
7	1" ROUND HEAD SCREW	8	 1" round head screw
6	Selfclose slider	2	 Selfclose slider
5	9/16"ROUND HEAD SCREW	40	 9/16" round head screw
4	CLEAT	10	 Cleat
3	1"FLAT HEAD SCREW FOR CARCASS	2	 1" flat head screw
2	WOOD BLOCK	4	 Wood block
1	1" FLAT HEAD SCREW FOR WOOD BLOCK	8	 1" flat head screw

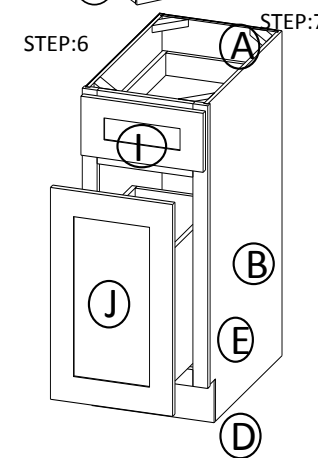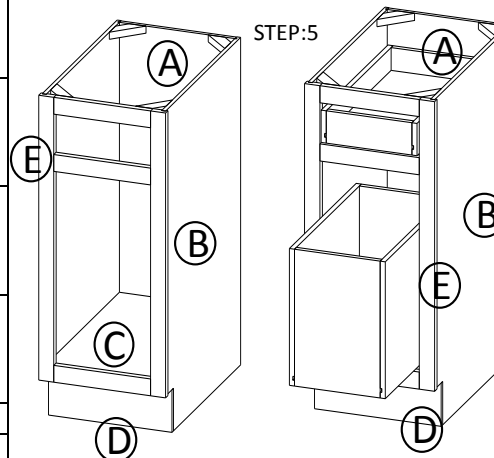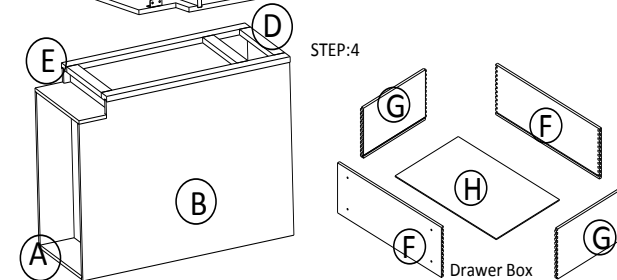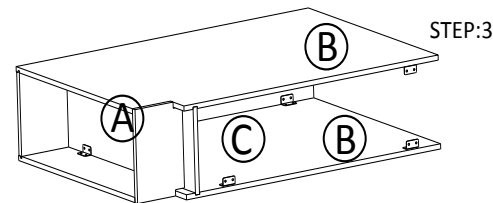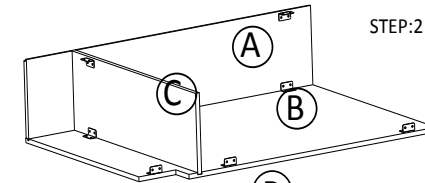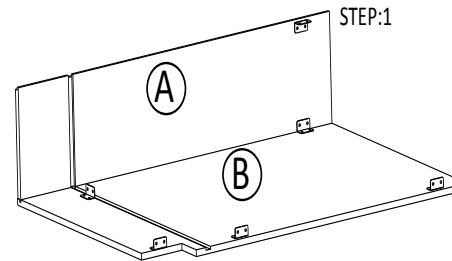

Full extension concealed drawer runners

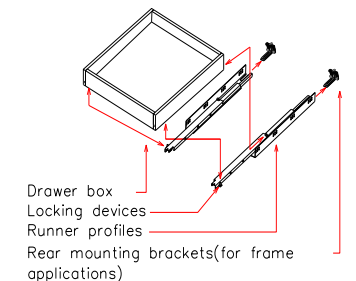



## Desk/Vanity Knee Drawer

### ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel

STEP 2: Joint side panel with back panel








STEP 3: Attach frame on and toekick board

STEP 4: Attach the wood block on the top corner

STEP 5: Joint the drawer together, then install the drawer guide.


STEP 6: Fix drawer head on the drawer front and adjust the cover-space

### HARDWARE LIST


NO.	Description	QTY	PICTURE
7	BUMPER	4	 Bumper
6	1" ROUND HEAD SCREW	4	 1" round head screw
5	18" SELFCLOSE SLIDE	1	 Selfclose slider
4	9/16" ROUND HEAD SCREW	16	 9/16" round head screw
3	CLEAT	4	 Cleat
2	WOOD BLOCK	4	 Wood block
1	1" FLAT HEAD SCREW FOR WOOD BLOCK	8	 1" flat head screw

PARTS LIST		
NO.	Description	QTY
A	SIDE PANEL	2
B	BACK PANEL	1
C	FACE FRAME	1
D	DRAWER HEAD	1
E	DRAWER BOX BOTTOM	1
F	DRAWER BOX FRONT AND BACK	2
G	DRAWER BOX SIDE	2


H

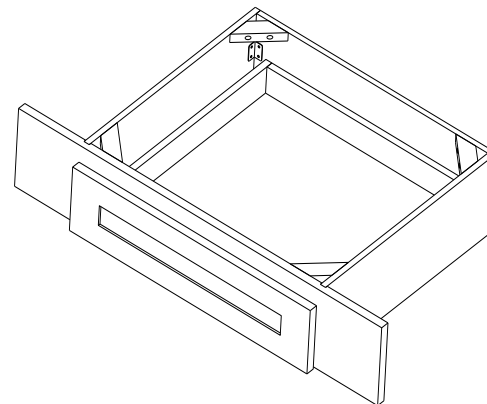


STEP:1

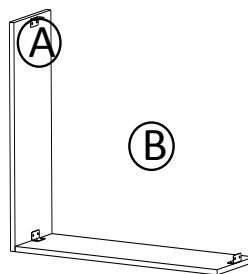


STEP:2

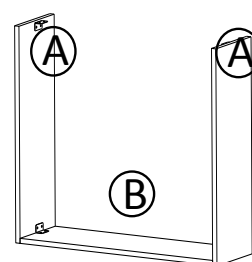


STEP:3

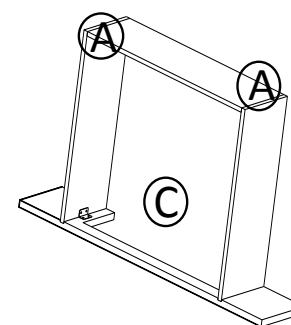



STEP:4

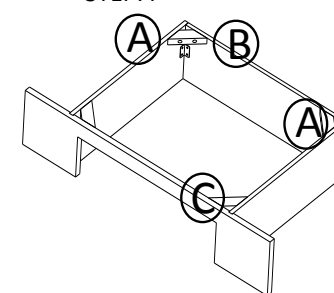


STEP:5

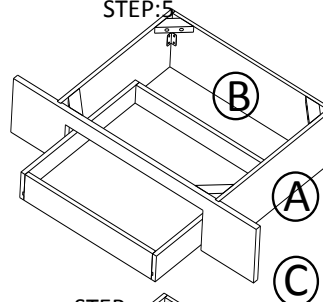

STEP:

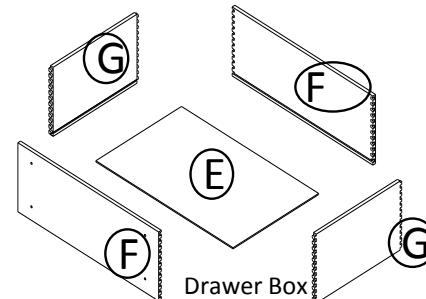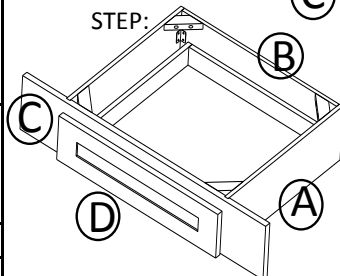

Full extension concealed drawer runners

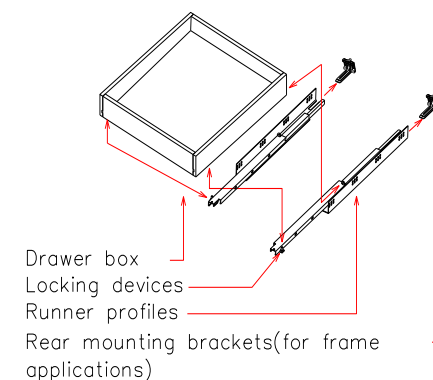

## Single Door Wall Cabinet

### ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel


STEP 2: Joint top panel with side panel

STEP 3: Joint bottom panel with side panel

STEP 4: Attach frame on

STEP 5: Put on the adjustable shelves




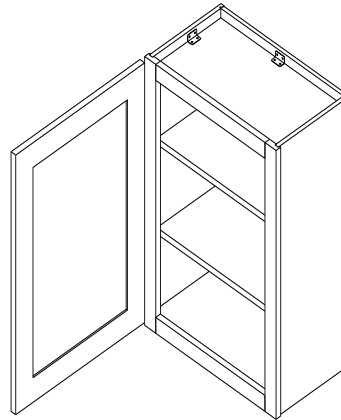



STEP 6: Fix door onto the frame and adjust the cover-space




### PARTS LIST

NO.	Description	QTY
A	SIDE PANEL	2
B	BACK PANEL	1
C	TOP&BOTTOM PANEL	2
D	FACE FRAME	1
E	ADJUSTABLE SHELF	2 OR 3
F	CABINETS DOOR	1


### HARDWARE LIST

NO.	Description	QTY	PICTURE
7	1 1/2" SOFTCLOSE HINGE	2	
6	3/4" ROUND HEAD SCREW	2	
5	BUMPER	2	
4	SHELF CLIP	8	
3	9/16"ROUND HEAD SCREW	40	
2	CLEAT	10	
1	1"FLAT HEAD SCREW FOR CARCASS	4	


STEP:1

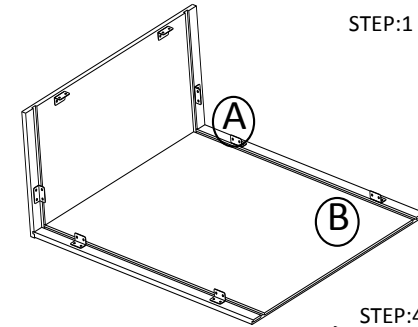


STEP:4

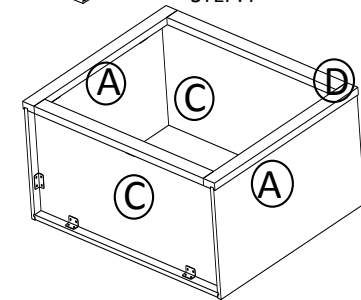


STEP:2

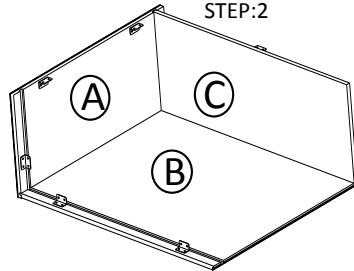


STEP:3

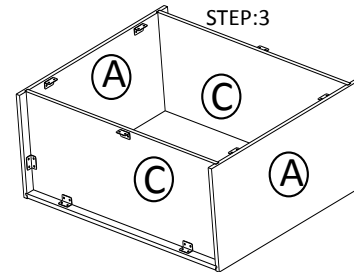

STEP:5

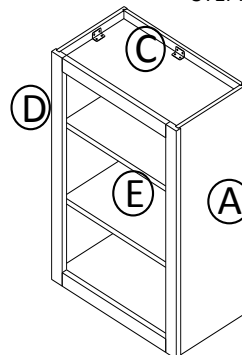

STEP:6

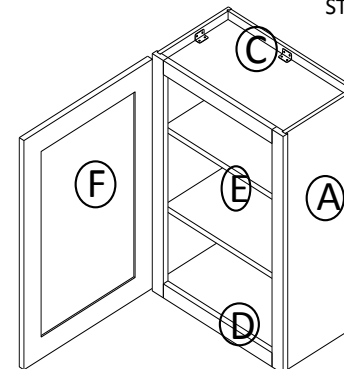

# Wall Easy Reach Cabinet

## ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint right side panel with right side back panel

STEP 2: Fix the bottom/top panel on


STEP 3: Joint left side panel with left side back panel

STEP 4: turn the carcass stand,Insert back panel through the groove

STEP 5: Attach face frame(long and short), then screw up

STEP 6: Put on the adjustable shelves







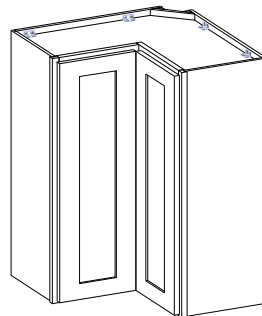


STEP 7: Hinge the door onto the face frame and adjust the cover-space




## PARTS LIST

NO.	Description	QTY
A	SIDE PANEL	2
B	SIDE BACK PANEL	2
C	TOP&BOTTOM PANEL	2
D	BACK PANEL	1
E	FACE FRAME	1
F	FACE FRAME	1
G	ADJUSTABLE SHELF	2 OR 3
H	CABINETS DOOR	2


## HARDWARE LIST

NO.	Description	QTY	PICTURE
9	135 DEGREE HINGE	3 OR 2	 135° hinge
8	3/4" ROUND HEAD SCREW	12 OR 4	 3/4" round head screw
7	BUMPER	6	 Bumper
6	165 DEGREE HINGE	3 OR 2	 165° hinge
5	SHELF CLIP	24 OR 16	 Shelf clip
4	9/16"ROUND HEAD SCREW	88	 9/16" round head screw
3	DOWEL	4	 Dowel
2	1"FLAT HEAD SCREW FOR CARCASS	6	 1" flat head screw
1	CLEAT	22	 Cleat


STEP:1

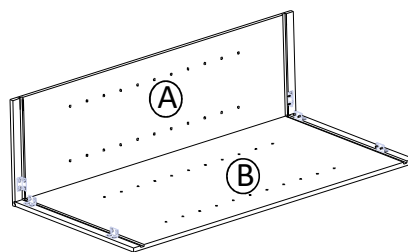


STEP:2

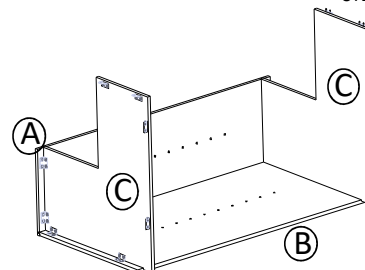


STEP:3

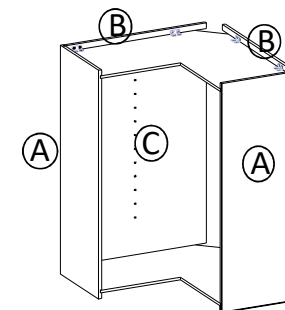


STEP:4

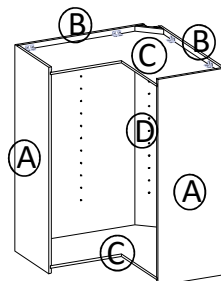


STEP:5

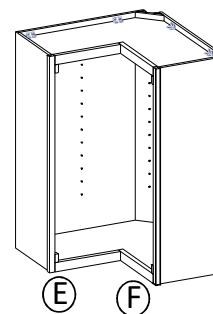

STEP:6

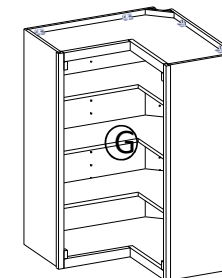

STEP:7

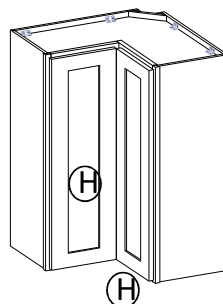

## Wall Open Cabinet

### ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel


STEP 2: Joint top panel with side panel

STEP 3: Joint bottom panel with side panel


STEP 4: Attach front face frame on

### PARTS LIST


NO.	Description	QTY
A	SIDE PANEL	2
B	BACK PANEL	1
C	TOP&BOTTOM PANEL	2
E	FACE FRAME	1

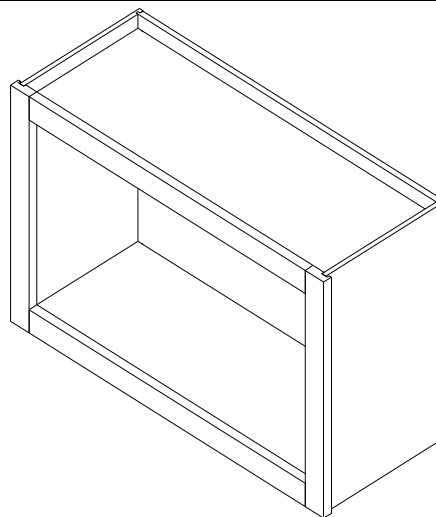


STEP:1

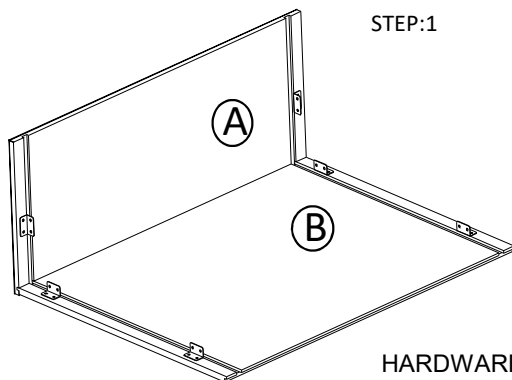

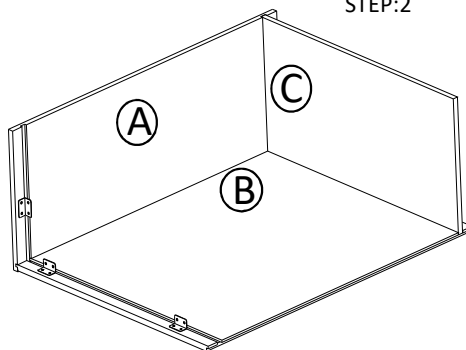


STEP:2

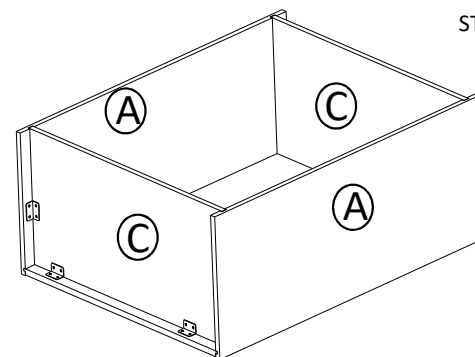


STEP:3



### HARDWARE LIST

NO.	Description	QTY	PICTURE
3	9/16"ROUND HEAD SCREW	48	 9/16" round head screw
2	CLEAT	12	 Cleat
1	1"FLAT HEAD SCREW FOR CARCASS	16	 1" flat head screw

STEP:4

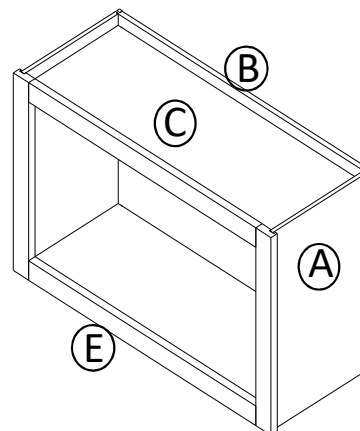

## Double Door Wall Cabinet

### ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel

STEP 2: Joint top panel with side panel

STEP 3: Joint bottom panel with side panel

STEP 4: Attach frame on








STEP 5: Put on the adjustable shelves








STEP 6: Fix door onto the frame and adjust the cover-space

### PARTS LIST

NO.	Description	QTY
A	SIDE PANEL	2
B	BACK PANEL	1
C	TOP&BOTTOM PANEL	2
D	FACE FRAME	1
E	ADJUSTABLE SHELF	2 OR 3
F	CABINETS DOOR	2

### HARDWARE LIST

NO.	Description	QTY	PICTURE
7	1 1/2" SOFTCLOSE HINGE	4	
6	3/4" ROUND HEAD SCREW	4	
5	BUMPER	4	
4	SHELF CLIP	8	
3	9/16"ROUND HEAD SCREW	56	
2	CLEAT	14	
1	1"FLAT HEAD SCREW FOR CARCASS	6	

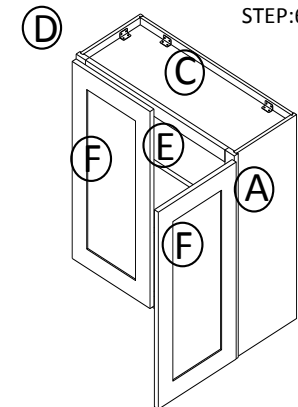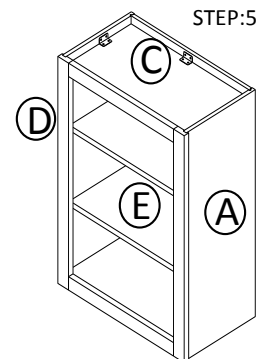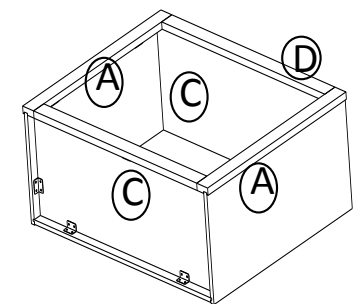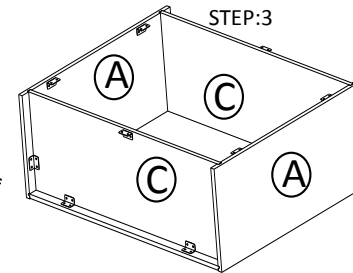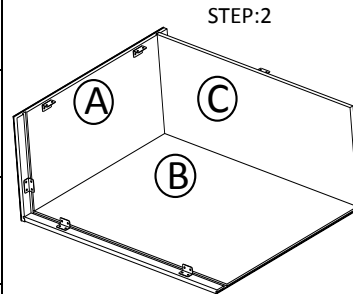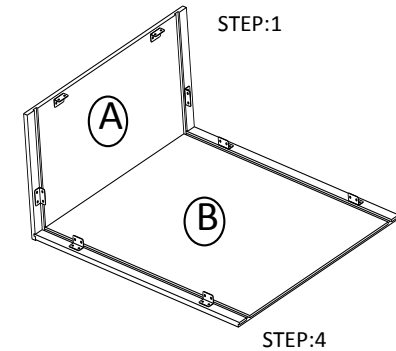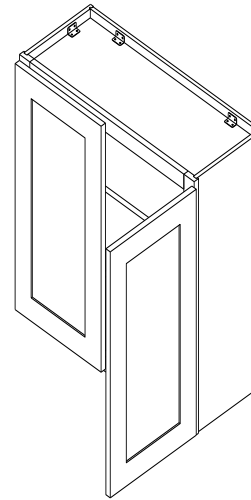

## Wall Blind Cabinet

### ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel


STEP 2: Joint top panel with side panel

STEP 3: Joint bottom panel with side panel

STEP 4: Attach frame on

STEP 5: Put on the adjustable shelves

STEP 6: Fix door onto the frame and adjust the cover-space

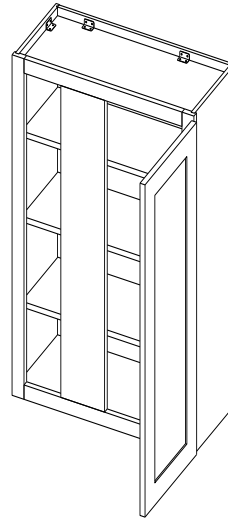


### PARTS LIST

NO.	Description	QTY
A	SIDE PANEL	2
B	BACK PANEL	1
C	TOP&BOTTOM PANEL	2
D	FACE FRAME	1
E	ADJUSTABLE SHELF	2
F	CABINETS DOOR	1


### HARDWARE LIST

NO.	Description	QTY	PICTURE
7	HINGE	2	
6	3/4" ROUND HEAD SCREW	2	 3/4" round head screw
5	BUMPER	2	 Bumper
4	SHELF CLIP	8	 Shelf clip
3	9/16" ROUND HEAD SCREW	56	 9/16" round head screw
2	CLEAT	14	 Cleat
1	1" FLAT HEAD SCREW FOR CARCASS	6	 1" flat head screw


STEP:1

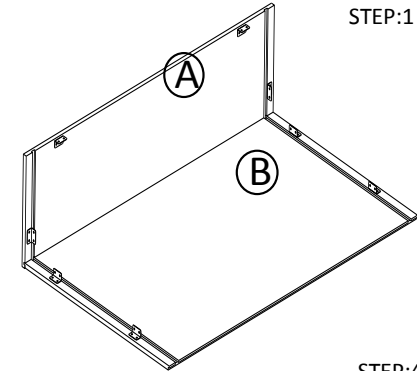


STEP:2

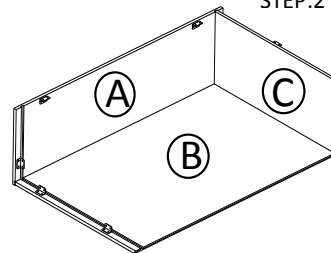


STEP:3

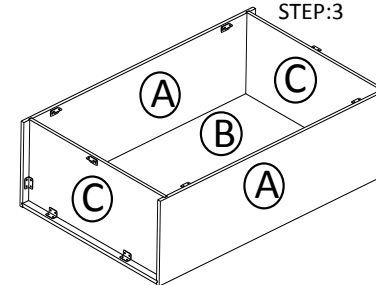


STEP:4

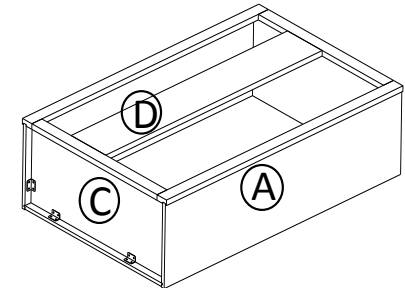

STEP:5

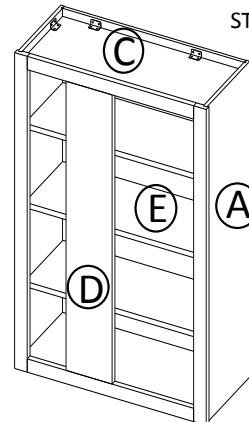

STEP:6

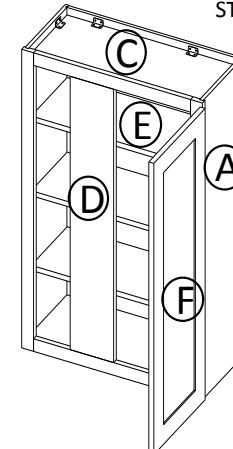



## Diagonal Corner Wall Cabinet

### ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with front face frame


STEP 2: Attach top panel with front face frame and side panel

STEP 3: Attach top panel with front face frame and side panel

STEP 4: Attach back panel on side panel

STEP 5: Insert back panel through groove, then screw up




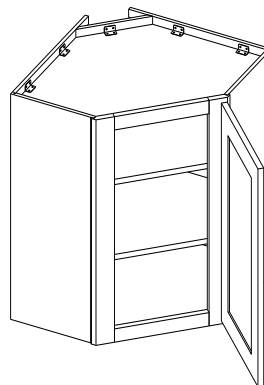




STEP 6: Hing door on to front face frame and adjust the cover-space




### PARTS LIST

NO.	Description	QTY
A	FACE FRAME	1
B	SIDE PANEL	2
C	TOP&BOTTOM PANEL	2
D	BACK PANEL	2
E	BACK PANEL	1
F	ADJUSTABLE SHELF	2
G	CABINETS DOOR	1


### HARDWARE LIST

NO.	Description	QTY	PICTURE
8	1 1/2" SOFTCLOSE HINGE	2	
7	3/4" ROUND HEAD SCREW	2	
6	BUMPER	2	
5	SHELF CLIP	10	
4	9/16" ROUND HEAD SCREW	92	
3	CLEAT	22	
2	1" FLAT HEAD SCREW FOR CARCASS	6	
1	135 DEGREE ANGLE	2	


STEP:1

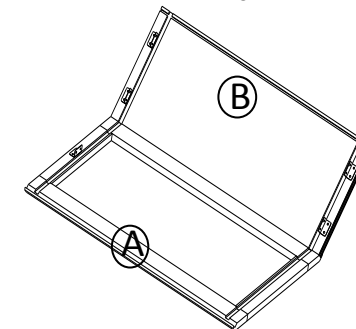


STEP:2

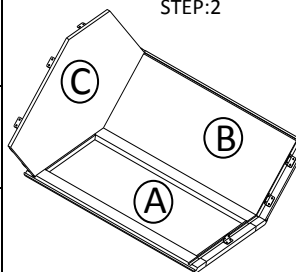


STEP:3

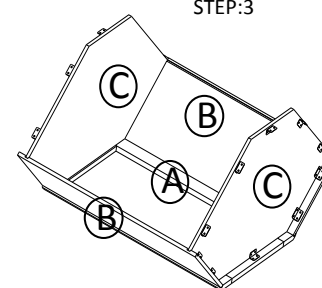


STEP:4

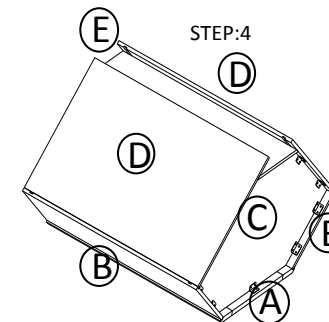

STEP:5

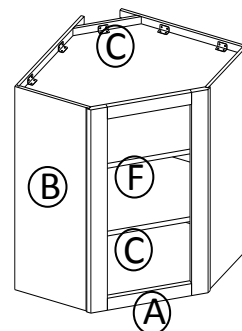

STEP:6

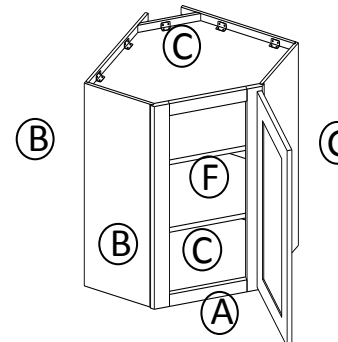

## Angle Wall

### ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver


STEP 1: Joint top&bottom panel with side panel

STEP 2: Attach left side panel

STEP 3: Attach the frame

STEP 4: Hinge the door to the face frame and adjust the cover-space




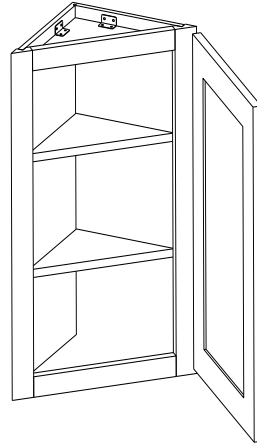


STEP 5: Put on the adjustable shelves




STEP:1


PARTS LIST		
NO.	Description	QTY
A	RIGHT SIDE PANEL	1
B	TOP&BOTTOM PANEL	2
C	LEFT SIDE PANEL	1
D	FACE FRAME	1
E	CABINETS DOOR	1
F	ADJUSTABLE SHELF	2 OR 3

### HARDWARE LIST


NO.	Description	QTY	PICTURE
6	1 1/2" SOFTCLOSE HINGE	2	 1 1/2" hinge
5	3/4" ROUND HEAD SCREW	2	 3/4" round head screw
4	BUMPER	2	 Bumper
3	SHELF CLIP	8 OR 12	 Shelf clip
2	9/16" ROUND HEAD SCREW	32	 9/16" round head screw
1	CLEAT	8	 Cleat

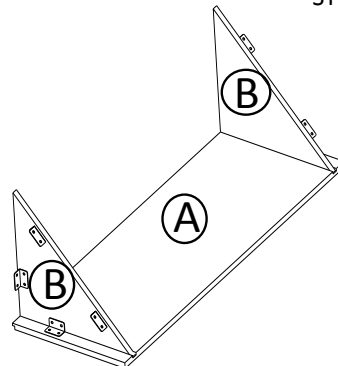


STEP:4

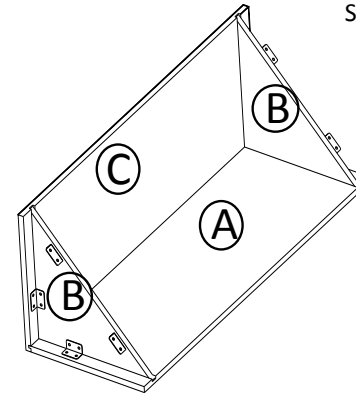


STEP:2

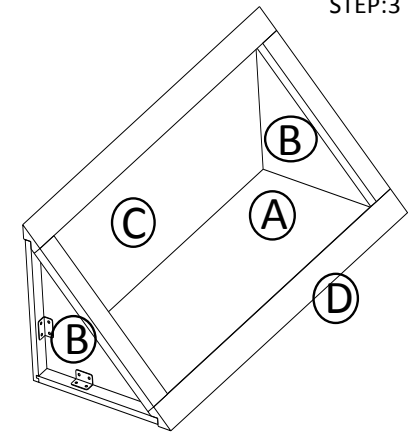

STEP:3

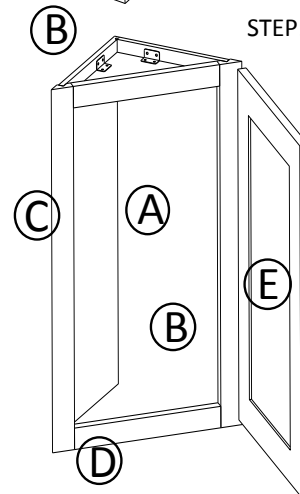

STEP:5

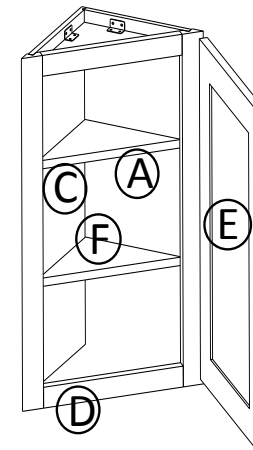

## Double Door & Four Door Utility Cabinets

### ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with top panel

STEP 2: Joint side panel with middle & bottom panel

STEP 3: Joint side panel with middle & bottom panel

STEP 4: Joint side panel with middle & bottom panel

STEP 5: Attach frame on








STEP 6: Put on the adjustable shelves


STEP 7: Fix door onto the frame and adjust the cover-space

### PARTS LIST


NO.	Description	QTY
A	SIDE PANEL	2
B	TOP&BOTTOM PANEL	3
C	TOE KICK	1
D	FACE FRAME	1
E	BACK PANEL	1
F	CABINETS DOOR	1 OR 2
G	CABINETS DOOR	1 OR 2
H	ADJUSTABLE SHELF	5

### HARDWARE LIST


NO.	Description	QTY	PICTURE
7	1 1/2" SOFTCLOSE HINGE	5	
6	3/4" ROUND HEAD SCREW	5	
5	BUMPER	4	
4	SHELF CLIP	20	
3	9/16" ROUND HEAD SCREW	56	
2	CLEAT	14	
1	1" FLAT HEAD SCREW FOR CARCASS	6	

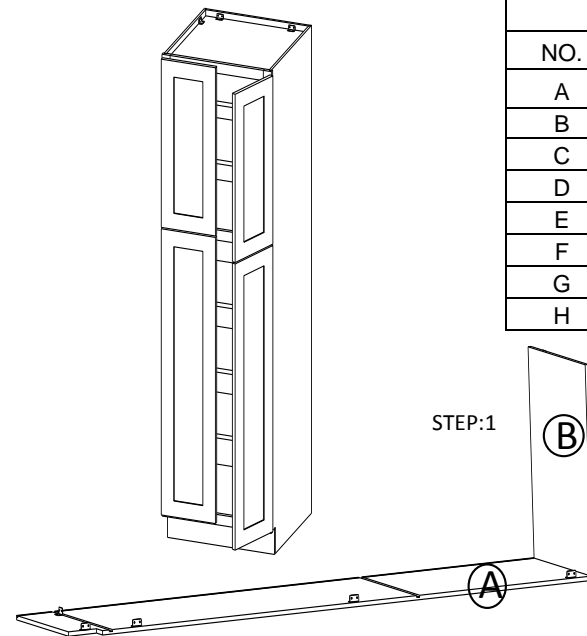


STEP:1

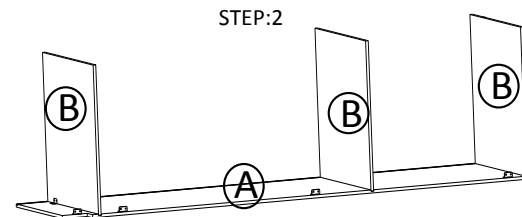


STEP:2

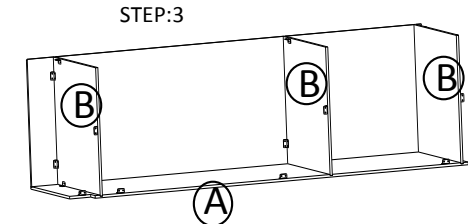


STEP:3

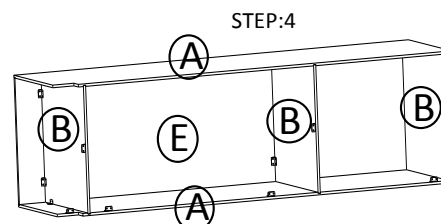

STEP:4

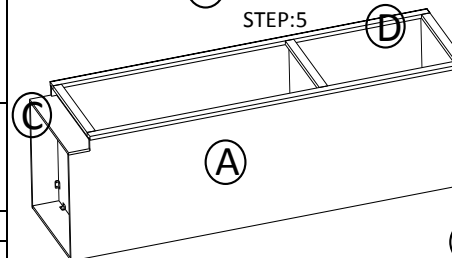

STEP:5

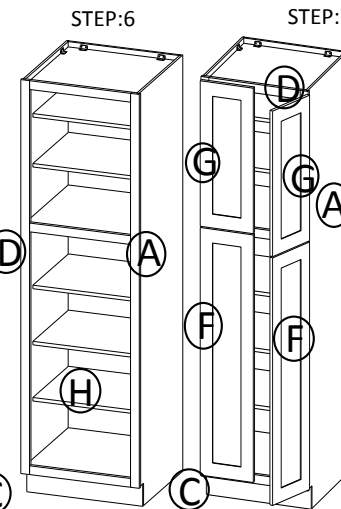

STEP:6

STEP:7

## Oven Cabinet

### ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with top panel

STEP 2: Joint back panel with side panel

STEP 3: Joint side panel with middle & bottom panel

STEP 4: Joint side panel with middle & bottom panel

STEP 5: Fix shelf board










STEP 6: Attach frame on and toekick board



STEP 7: Joint the drawer together, then install the drawer guide.

STEP 8: Fix door&drawer head onto the frame and adjust the cover-space


PARTS LIST		
NO.	Description	QTY
A	SIDE PANEL	2
B	TOP&BOTTOM PANEL	3
C	BACK PANEL	1
D	FACE FRAME	1
E	TOE KICK	1
F	DRAWER BOX FRONT AND BACK	6
G	DRAWER BOX SIDE	6
H	DRAWER BOX BOTTOM	3
I	DRAWER HEAD	3
J	CABINETS DOOR	2
K	ADJUSTABLE SHELF	2

HARDWARE LIST			
NO.	Description	QTY	PICTURE

9	1 1/2" SOFTCLOSE HINGE	4	
8	3/4" ROUND HEAD SCREW	4	
7	BUMPER	16	
6	1" ROUND HEAD SCREW	12	
5	Selfclose slider	3	
4	SHELF CLIP	4	
3	9/16" ROUND HEAD SCREW	68	
2	CLEAT	17	
1	1" FLAT HEAD SCREW FOR CARCASS	22	

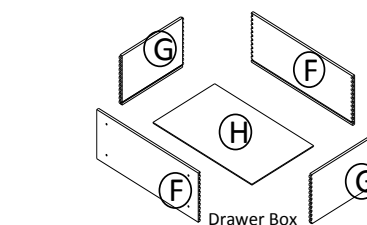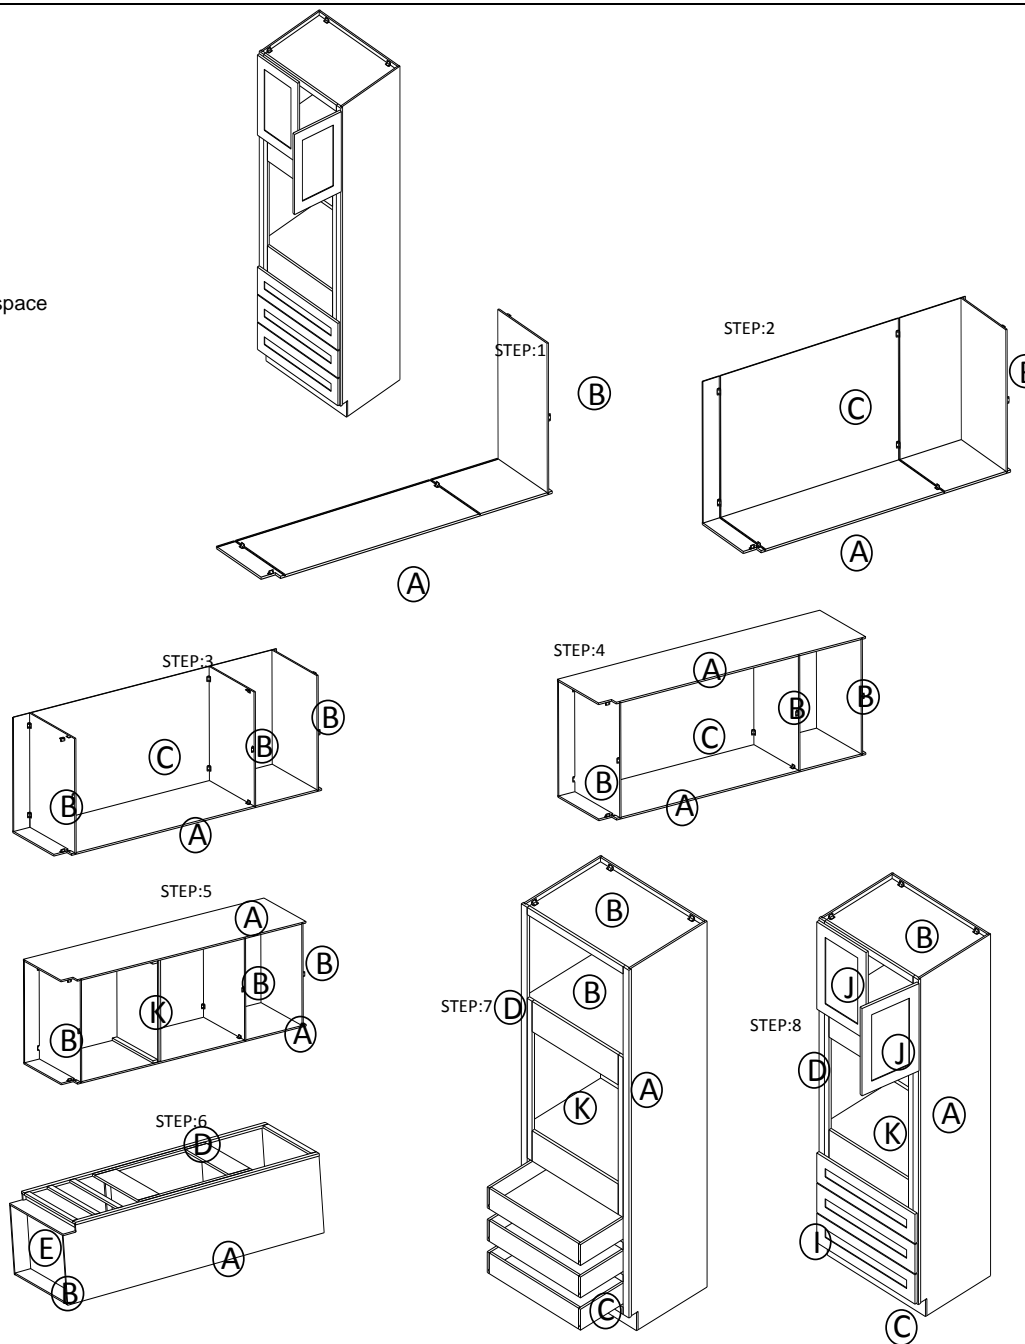

Full extension concealed drawer runners

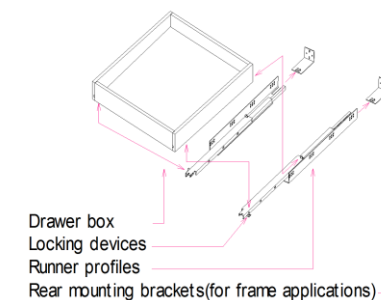

# 30" Combo Vanity with Drawers Left or Drawers Right

## ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel

STEP 2: Joint bottom panel with side panel



STEP 3: Joint side panel with bottom & back panel

STEP 4: Attach frame on and toekick board


STEP 5: Joint the drawer together, then install the drawer guide.

STEP 6: Attach the wood block on the top corner.

STEP 7: Fix drawer head on the drawer front and fix door onto the frame and adjust the cover-space

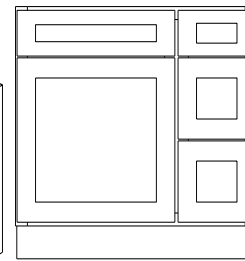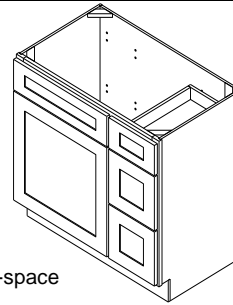

V3021DR

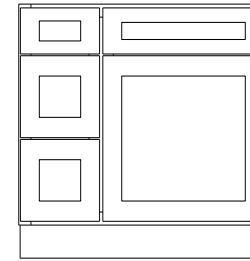


V3021DL

## PARTS LIST


NO.	Description	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	TOP&BOTTOM PANEL	1
D	TOE KICK	1
E	FACE FRAME	1
F	DRAWER BOX FRONT AND BACK	6
G	DRAWER BOX SIDE	6
H	DRAWER BOX BOTTOM	3
I	CABINETS DOOR	1
J	DRAWER HEAD	4

## HARDWARE LIST


NO.	Description	QTY	PICTURE
10	1 1/2" SOFTCLOSE HINGE	2	
9	3/4" ROUND HEAD SCREW	2	
8	BUMPER	14	
7	1" ROUND HEAD SCREW	12	
6	Selfclose slider	3	
5	9/16"ROUND HEAD SCREW	44	
4	CLEAT	11	
3	1"FLAT HEAD SCREW FOR CARCASS	4	
2	WOOD BLOCK	4	
1	1" FLAT HEAD SCREW FOR WOOD BLOCK	8	

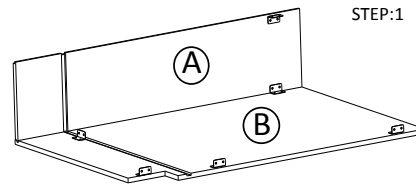


STEP:1

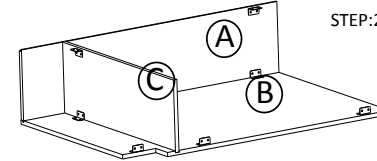


STEP:2

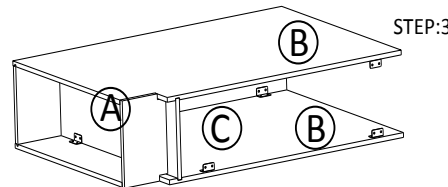


STEP:3

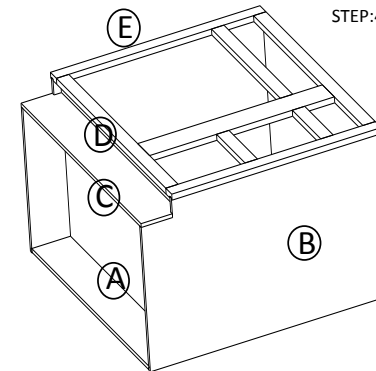


STEP:4

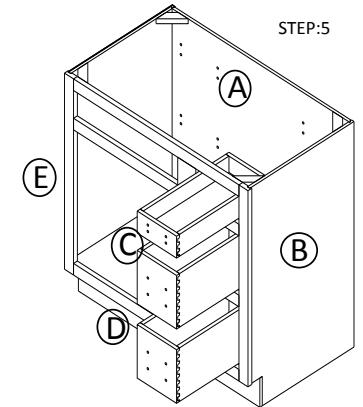

STEP:5


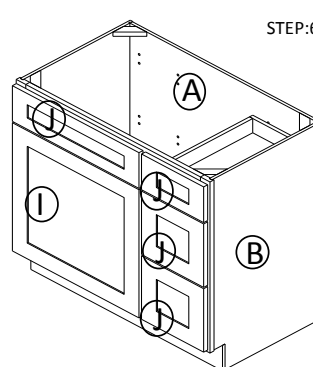


STEP:6

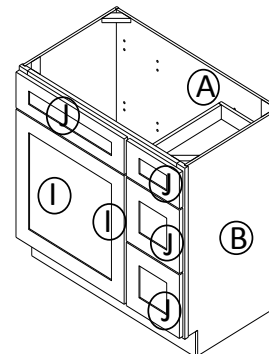

STEP:7

Full extension concealed drawer runners

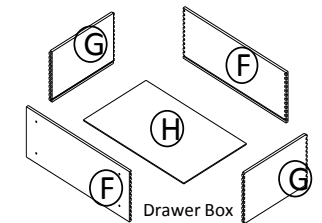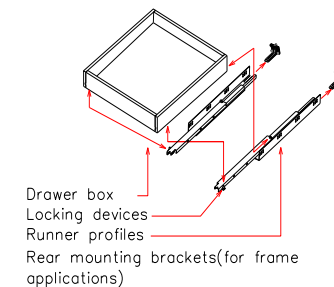

Drawer Box

## 36" Combo Vanity with Drawers Left or Drawers Right

### ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel

STEP 2: Joint bottom panel with side panel



STEP 3: Joint side panel with bottom & back panel

STEP 4: Attach frame on and toekick board


STEP 5: Joint the drawer together, then install the drawer guide.

STEP 6: Attach the wood block on the top corner.

STEP 7: Fix drawer head on the drawer front and fix door onto the frame and adjust the cover-space

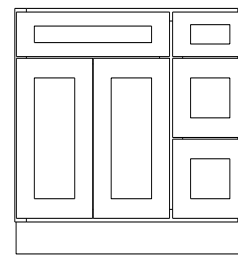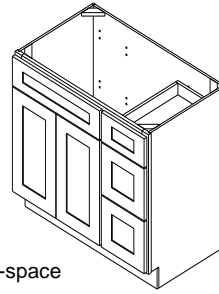

V3621DR

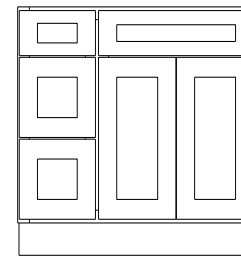


V3621DL


PARTS LIST		
NO.	Description	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	TOP&BOTTOM PANEL	1
D	TOE KICK	1
E	FACE FRAME	1
F	DRAWER BOX FRONT AND BACK	6
G	DRAWER BOX SIDE	6
H	DRAWER BOX BOTTOM	3
I	CABINETS DOOR	2
J	DRAWER HEAD	4

### HARDWARE LIST


NO.	Description	QTY	PICTURE
10	1 1/2" SOFTCLOSE HINGE	4	
9	3/4" ROUND HEAD SCREW	4	
8	BUMPER	16	
7	1" ROUND HEAD SCREW	12	
6	Selfclose slider	3	
5	9/16" ROUND HEAD SCREW	44	
4	CLEAT	11	
3	1" FLAT HEAD SCREW FOR CARCASS	4	
2	WOOD BLOCK	4	
1	1" FLAT HEAD SCREW FOR WOOD BLOCK	8	

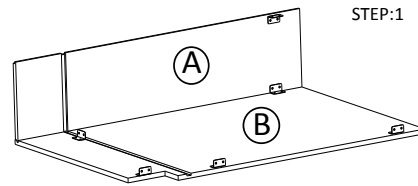


STEP:1

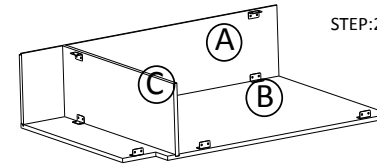


STEP:2

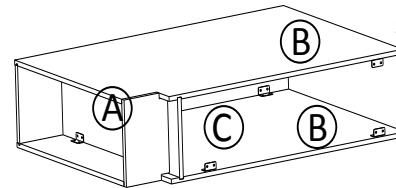


STEP:3

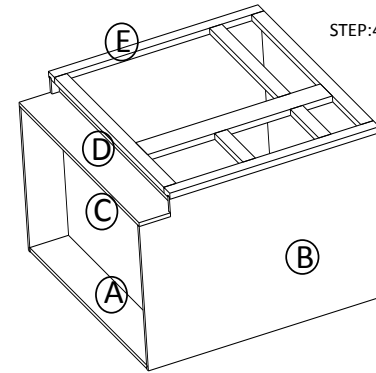


STEP:4

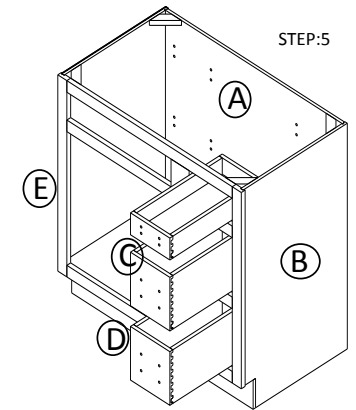

STEP:5


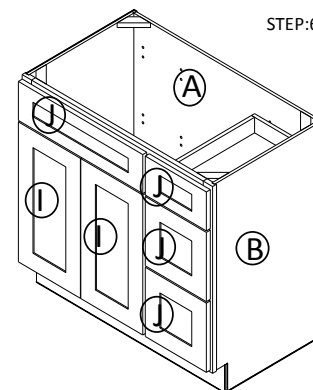


STEP:6

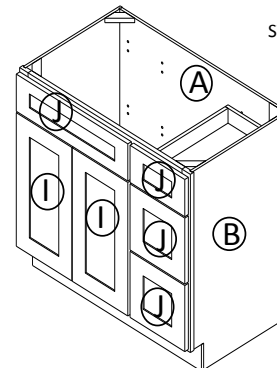

STEP:7

Full extension concealed drawer runners

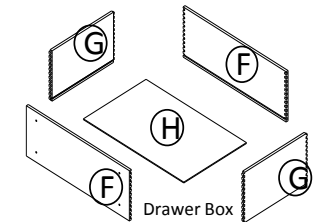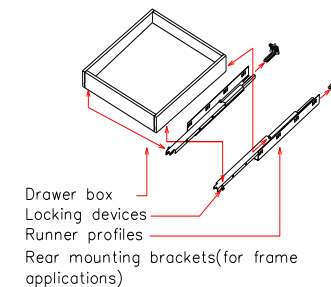

Drawer Box



## Vanity Sink Combo

### ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel

STEP 2: Joint bottom panel with side panel


STEP 3: Joint side panel with bottom & back panel

STEP 4: Attach frame on and toekick board

STEP 5: Joint the drawer together, then install the drawer guide.






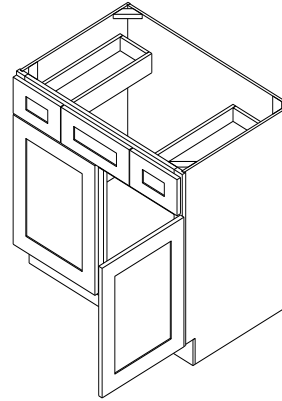




STEP 6: Attach the wood block on the top corner.


STEP 7: Fix drawer head on the drawer front and fix door onto the frame and adjust the cover-space




PARTS LIST		
NO.	Description	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	TOP&BOTTOM PANEL	1
D	TOE KICK	1
E	FACE FRAME	1
F	DRAWER BOX FRONT AND BACK	4
G	DRAWER BOX SIDE	4
H	DRAWER BOX BOTTOM	2
I	DRAWER HEAD	2
J	DRAWER HEAD	1
K	CABINETS DOOR	2

### HARDWARE LIST


NO.	Description	QTY	PICTURE
10	1 1/2" SOFTCLOSE HINGE	4	
9	3/4" ROUND HEAD SCREW	4	
8	BUMPER	12	
7	1" ROUND HEAD SCREW	8	
6	Selfclose slider	2	
5	9/16" ROUND HEAD SCREW	44	
4	CLEAT	11	
3	1" FLAT HEAD SCREW FOR CARCASS	5	
2	WOOD BLOCK	4	
1	1" FLAT HEAD SCREW FOR WOOD BLOCK	8	

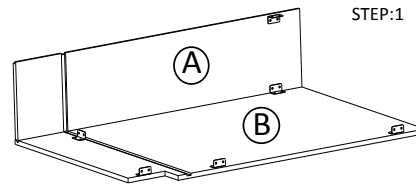


STEP:1

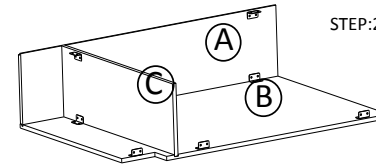


STEP:2

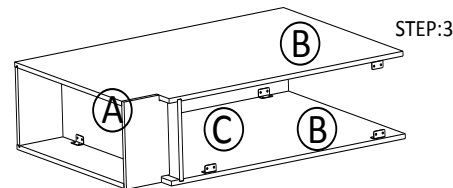


STEP:3

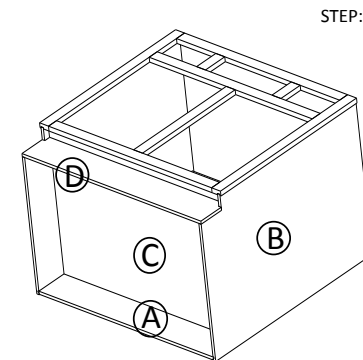


STEP:4

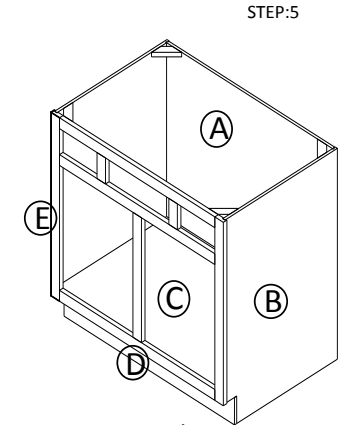

STEP:5


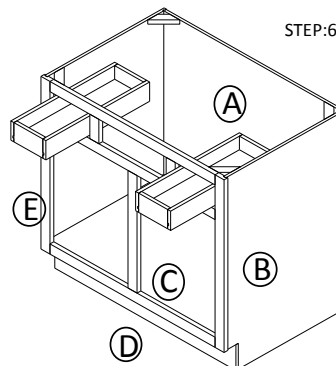


STEP:6

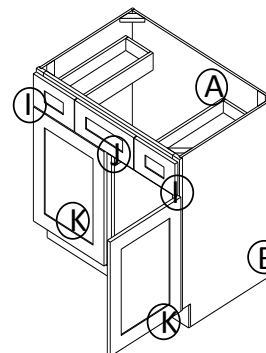

STEP:7

Full extension concealed drawer runners

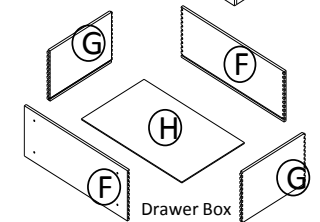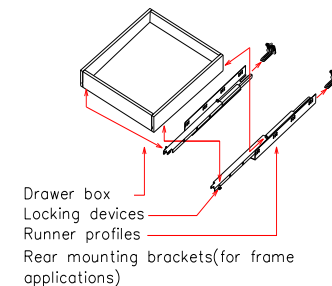

# Vanity Sink Combo with Two Drawer Stacks

## ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel

STEP 2: Joint bottom panel with side panel

STEP 3: Joint side panel with bottom & back panel


STEP 4: Attach frame on and toekick board

STEP 5: Attach the wood block on the top corner.

STEP 6: Joint the drawer together, then install the drawer guide.

STEP 7: Fix drawer head on the drawer front and fix door onto the frame and adjust the cover-space








STEP 6: Attach the wood block on the top corner.

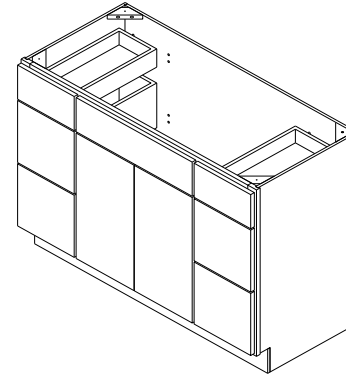

PARTS LIST		
NO.	Description	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	TOP&BOTTOM PANEL	1
D	TOE KICK	1
E	FACE FRAME	1
F	DRAWER BOX FRONT AND BACK	12
G	DRAWER BOX SIDE	12
H	DRAWER BOX BOTTOM	6
I	DRAWER HEAD	6
J	DRAWER HEAD	1
K	CABINETS DOOR	2

## HARDWARE LIST

NO.	Description	QTY	PICTURE
10	SOFTCLOSE HINGE	4	
9	3/4" ROUND HEAD SCREW	4	
8	BUMPER	32	
7	1" ROUND HEAD SCREW	8	
6	Selfclose slider	2	
5	9/16"ROUND HEAD SCREW	44	
4	CLEAT	11	
3	1"FLAT HEAD SCREW FOR CARCASS	5	
2	WOOD BLOCK	4	
1	1" FLAT HEAD SCREW FOR WOOD BLOCK	8	

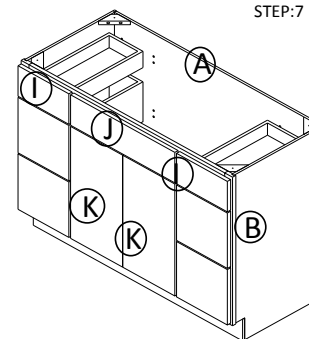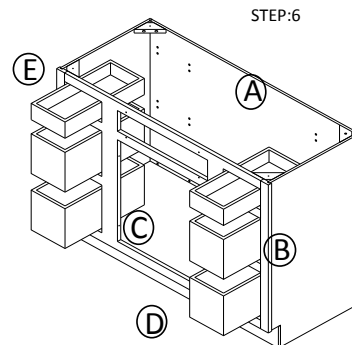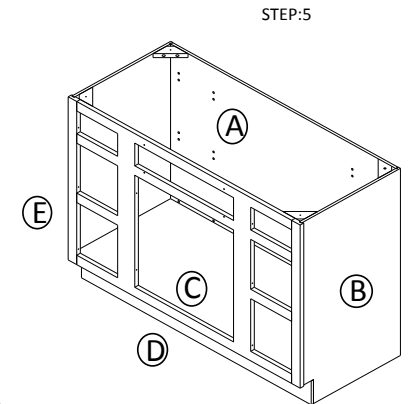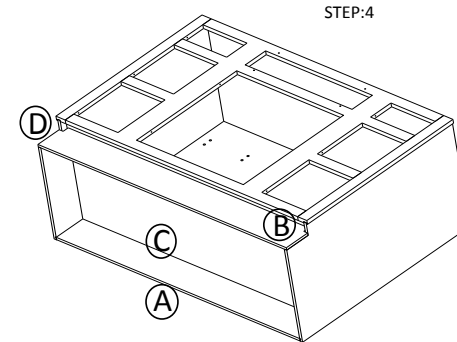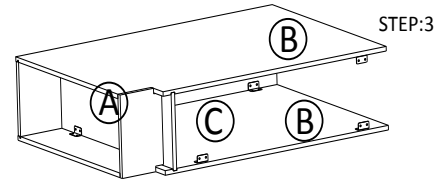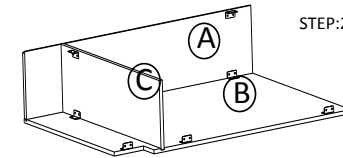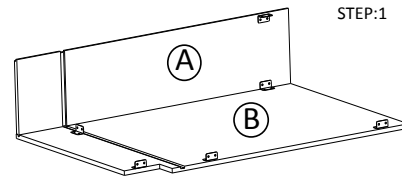

Full extension concealed drawer runners

