



Assembly Guide Manual

Please Note:


These instructions apply only to the following cabinet lines:

- Devon Shaker
- Devon Slab
- Driftwood Shaker
- Driftwood Slab
- Gladwyne Raised
- Gladwyne Slab
- Newtown Shaker
- Newtown Slab
- Radnor Shaker
- Radnor Slab
- Rustic Shaker
- Springfield Shaker
- Springfield Slab
- Truffle Shaker
- Truffle Slab
- Windon Slab


If your cabinets are not listed above, please refer to the appropriate instructions for your specific product line.




Base Cabinet Assembly Instructions

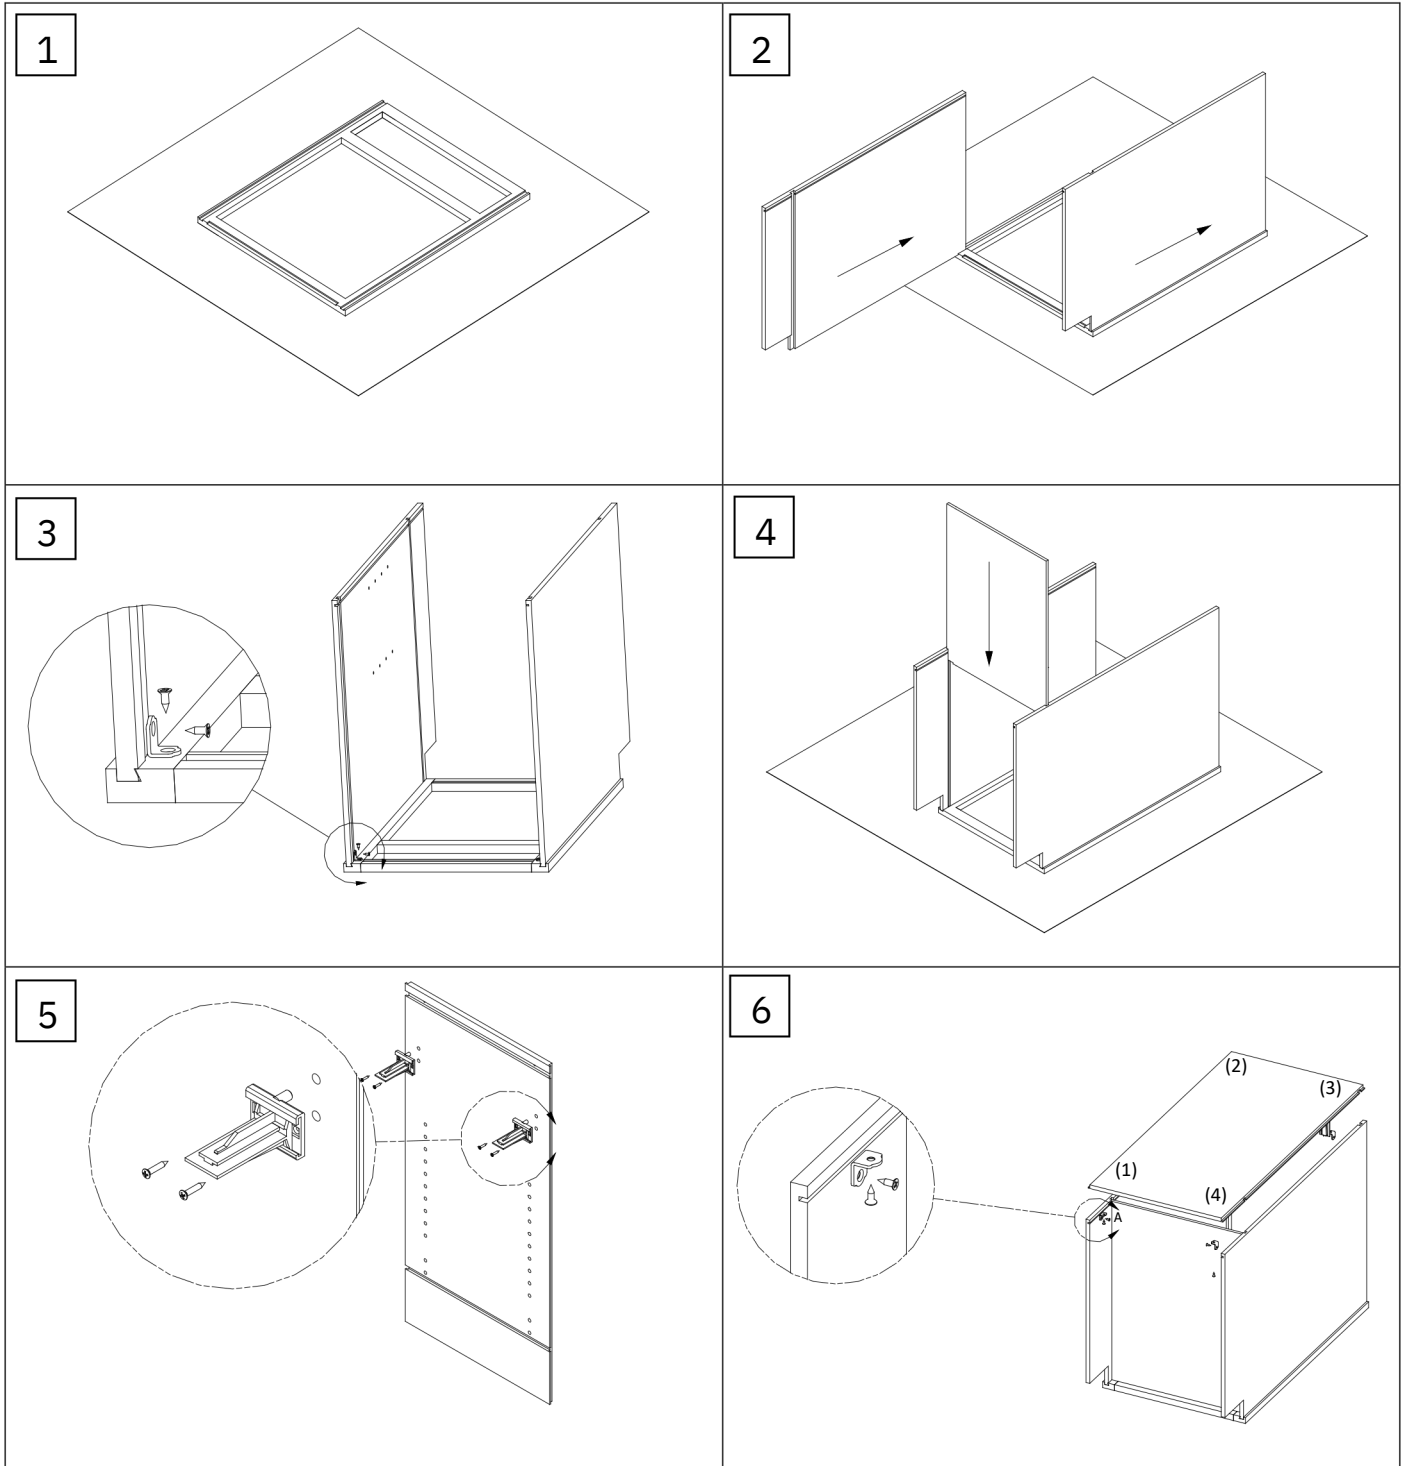


7

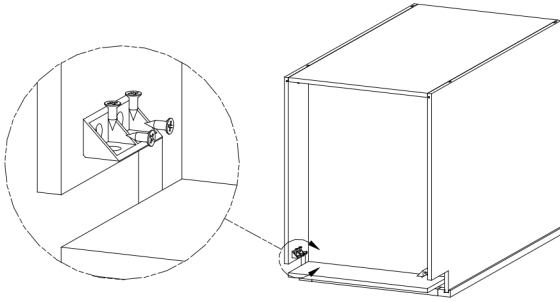


8

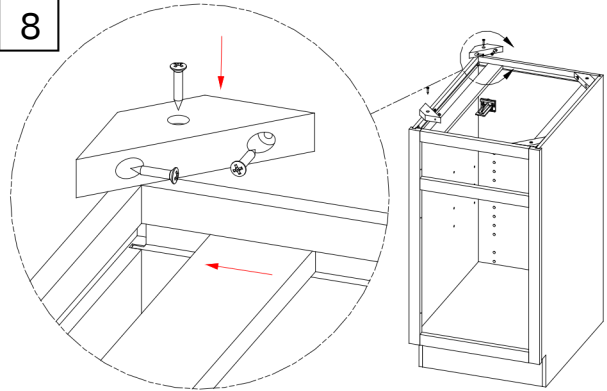


9

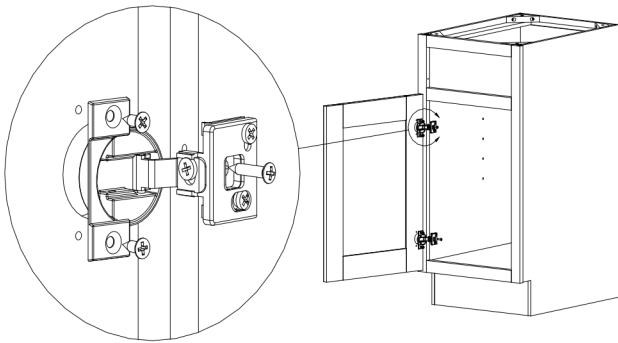


10

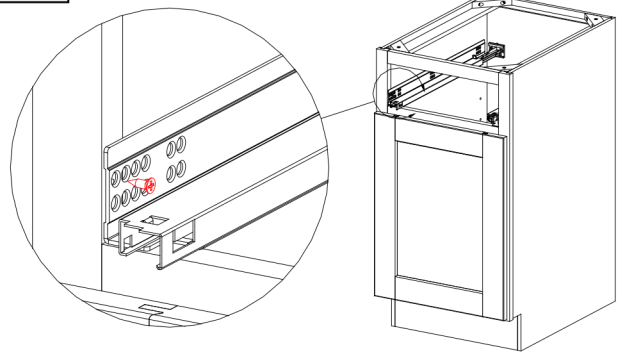


11

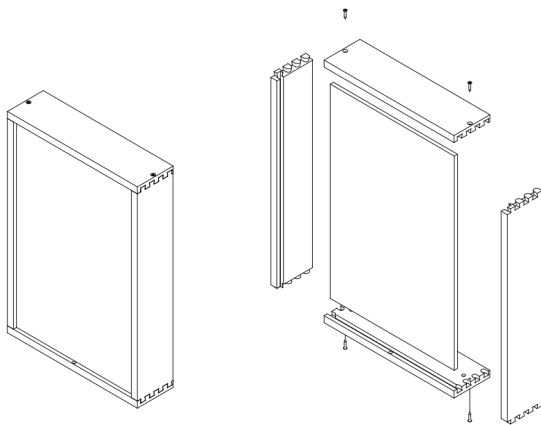


12

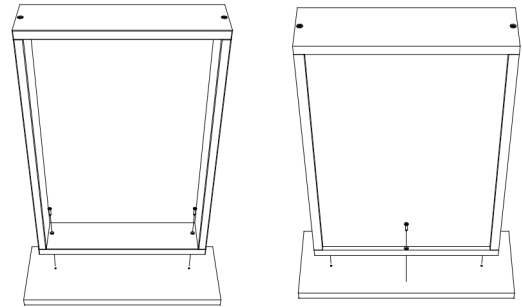



13

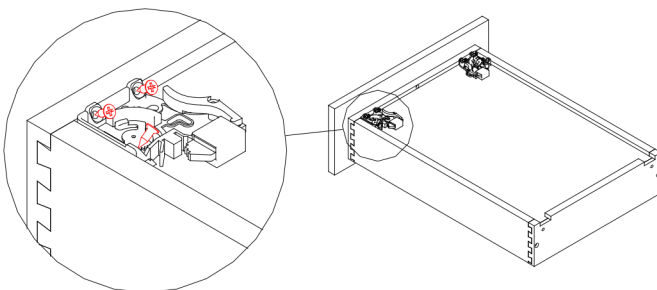

14

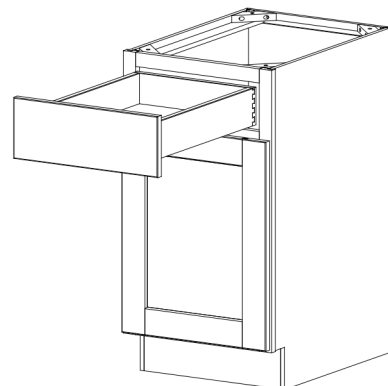










Sink Base Cabinet Assembly Instructions

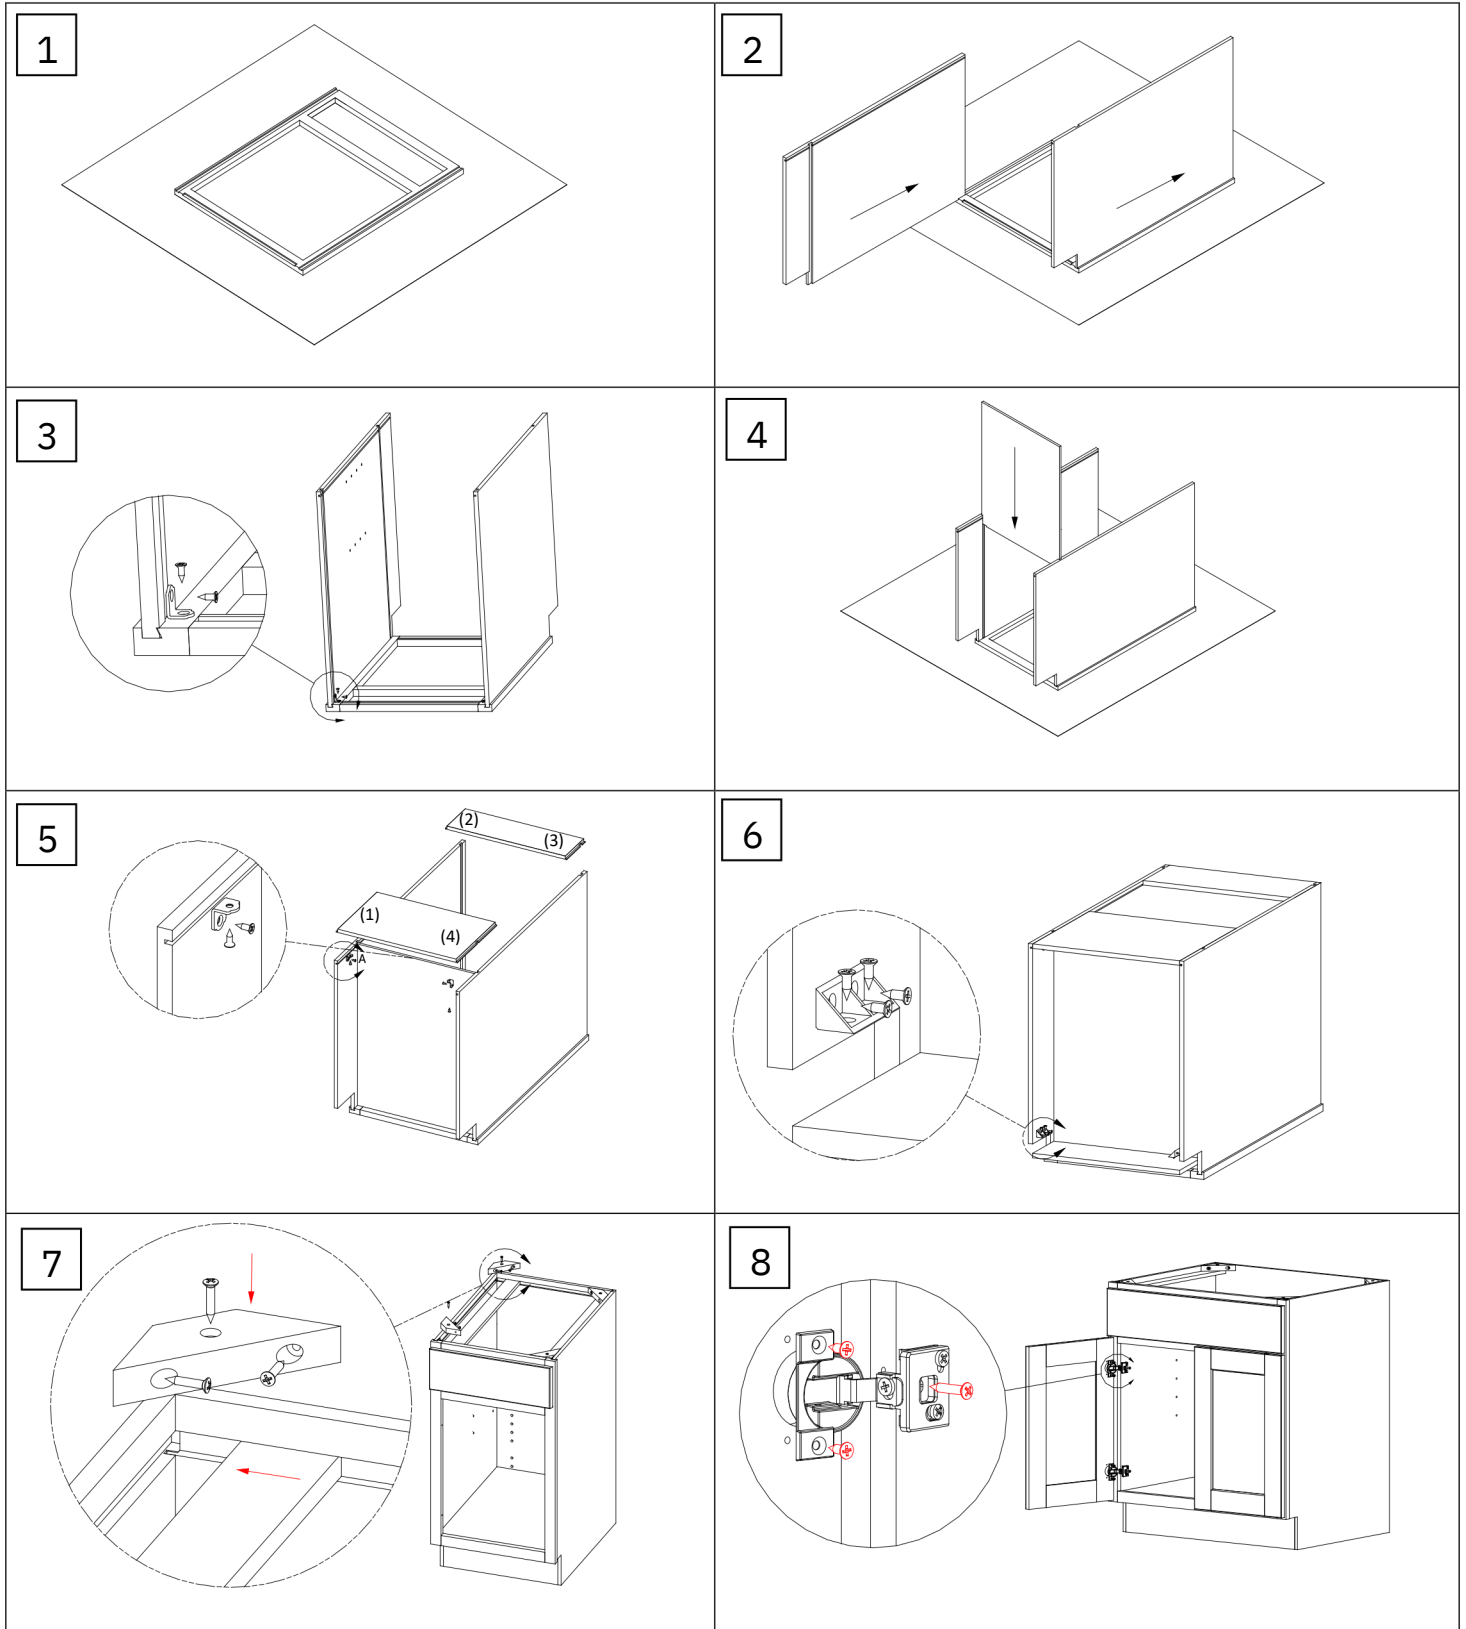




Lazy Susan Assembly Instructions

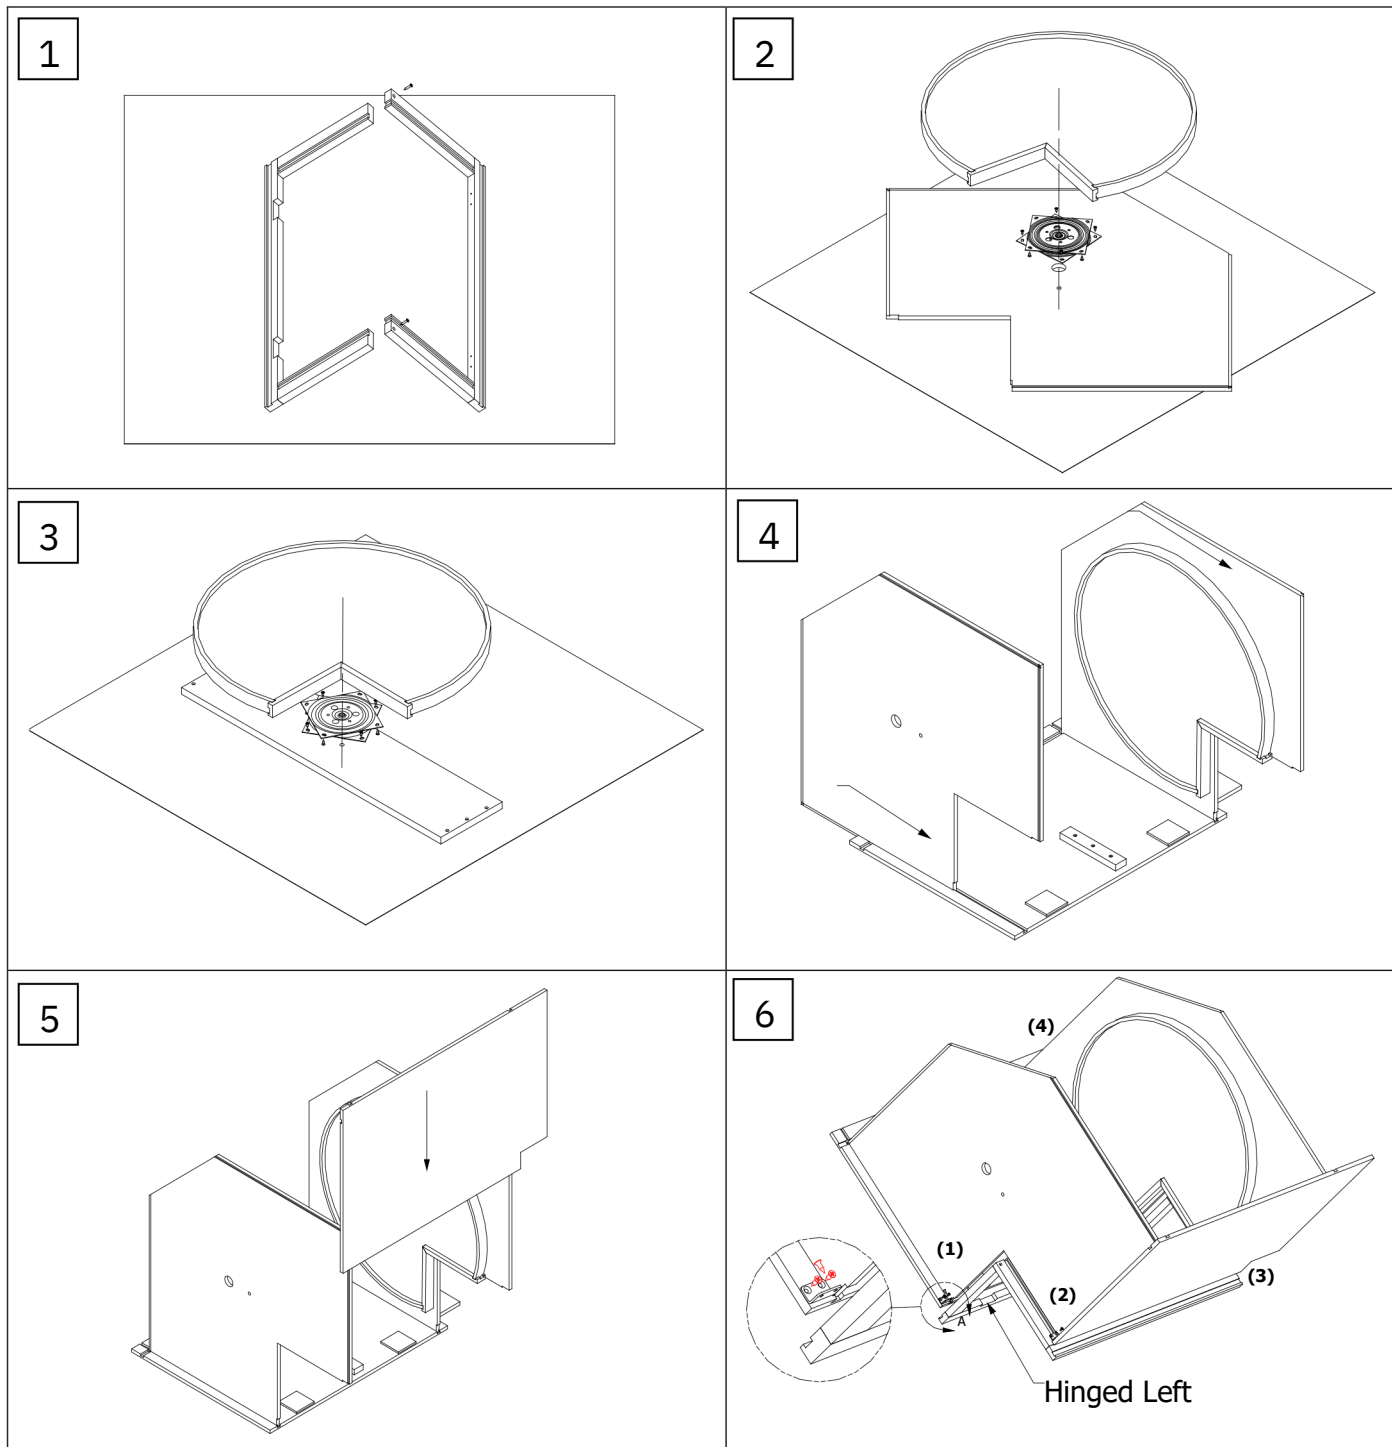

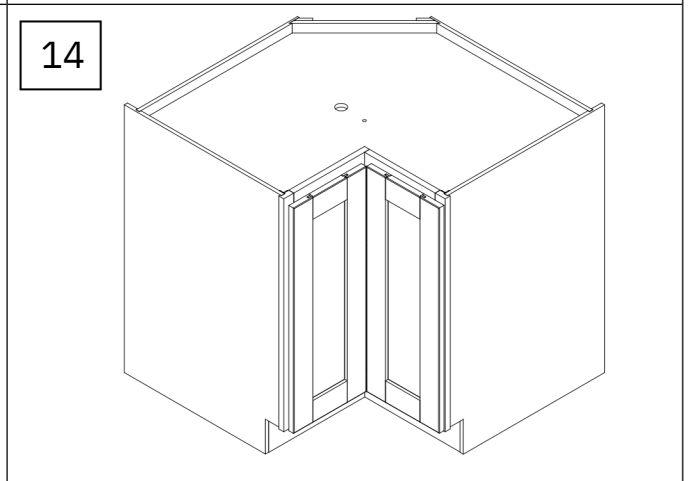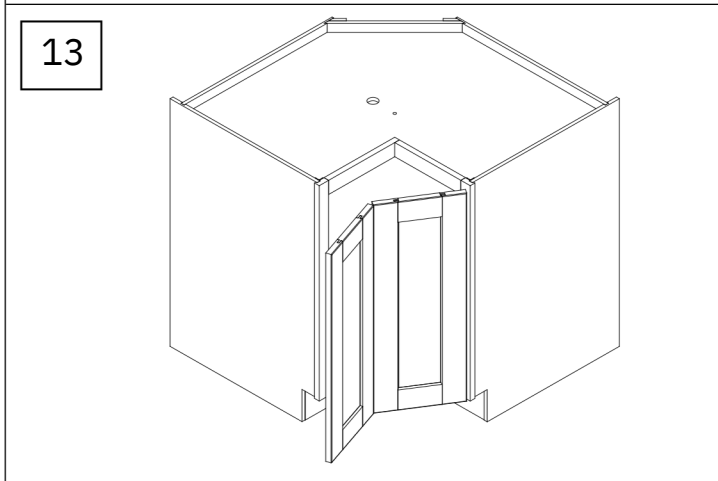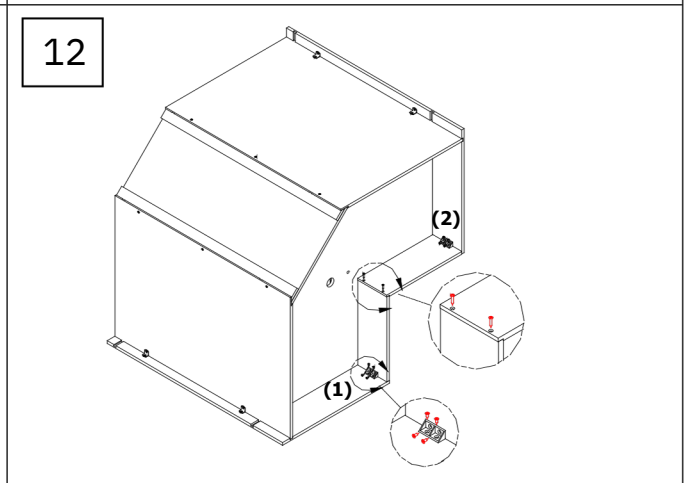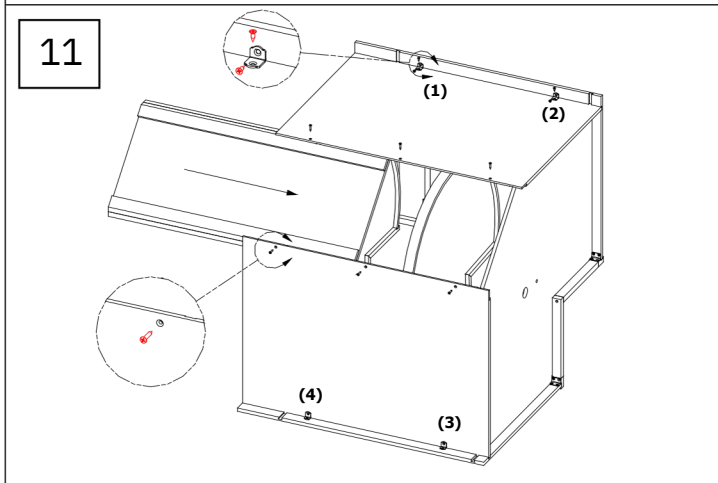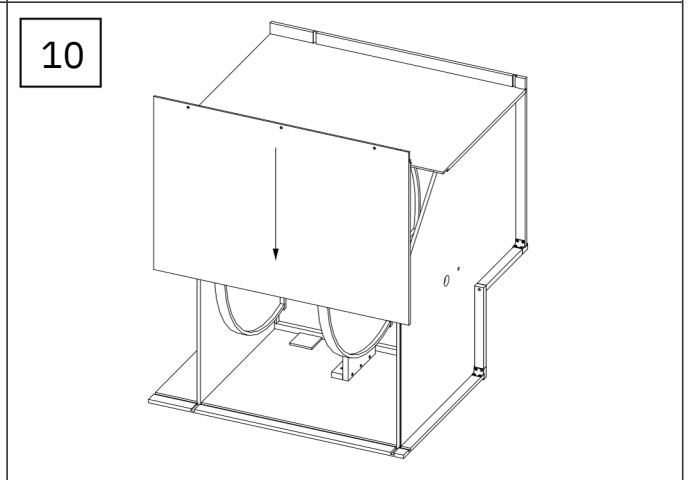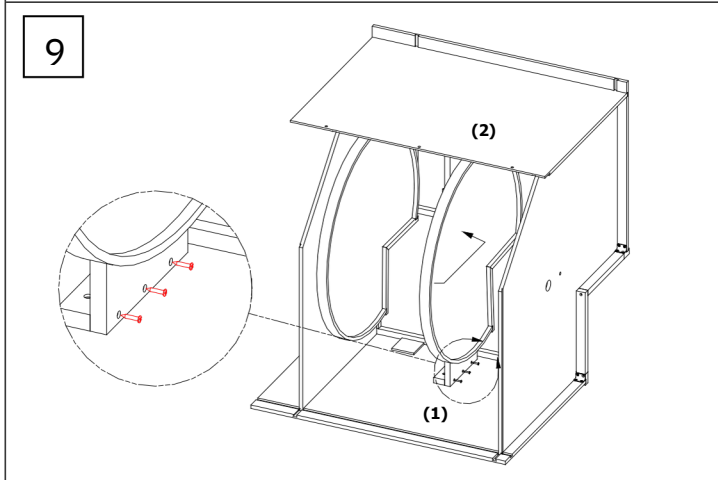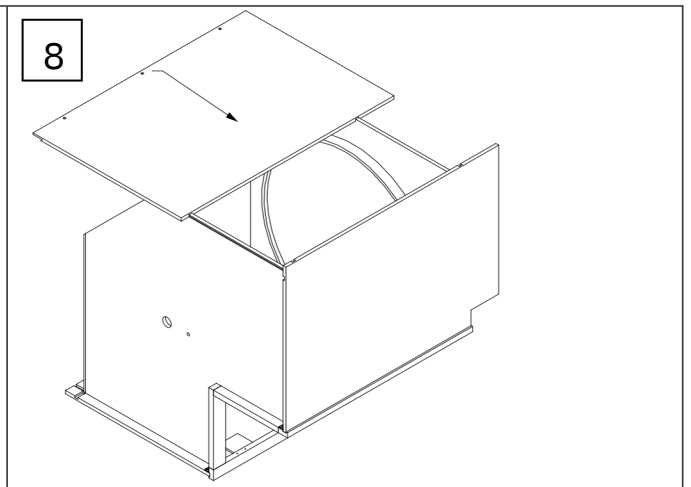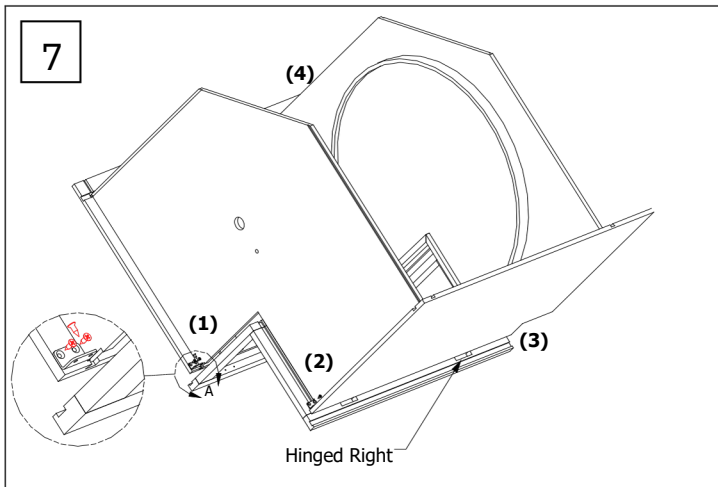





Wall Cabinets Assembly Instructions


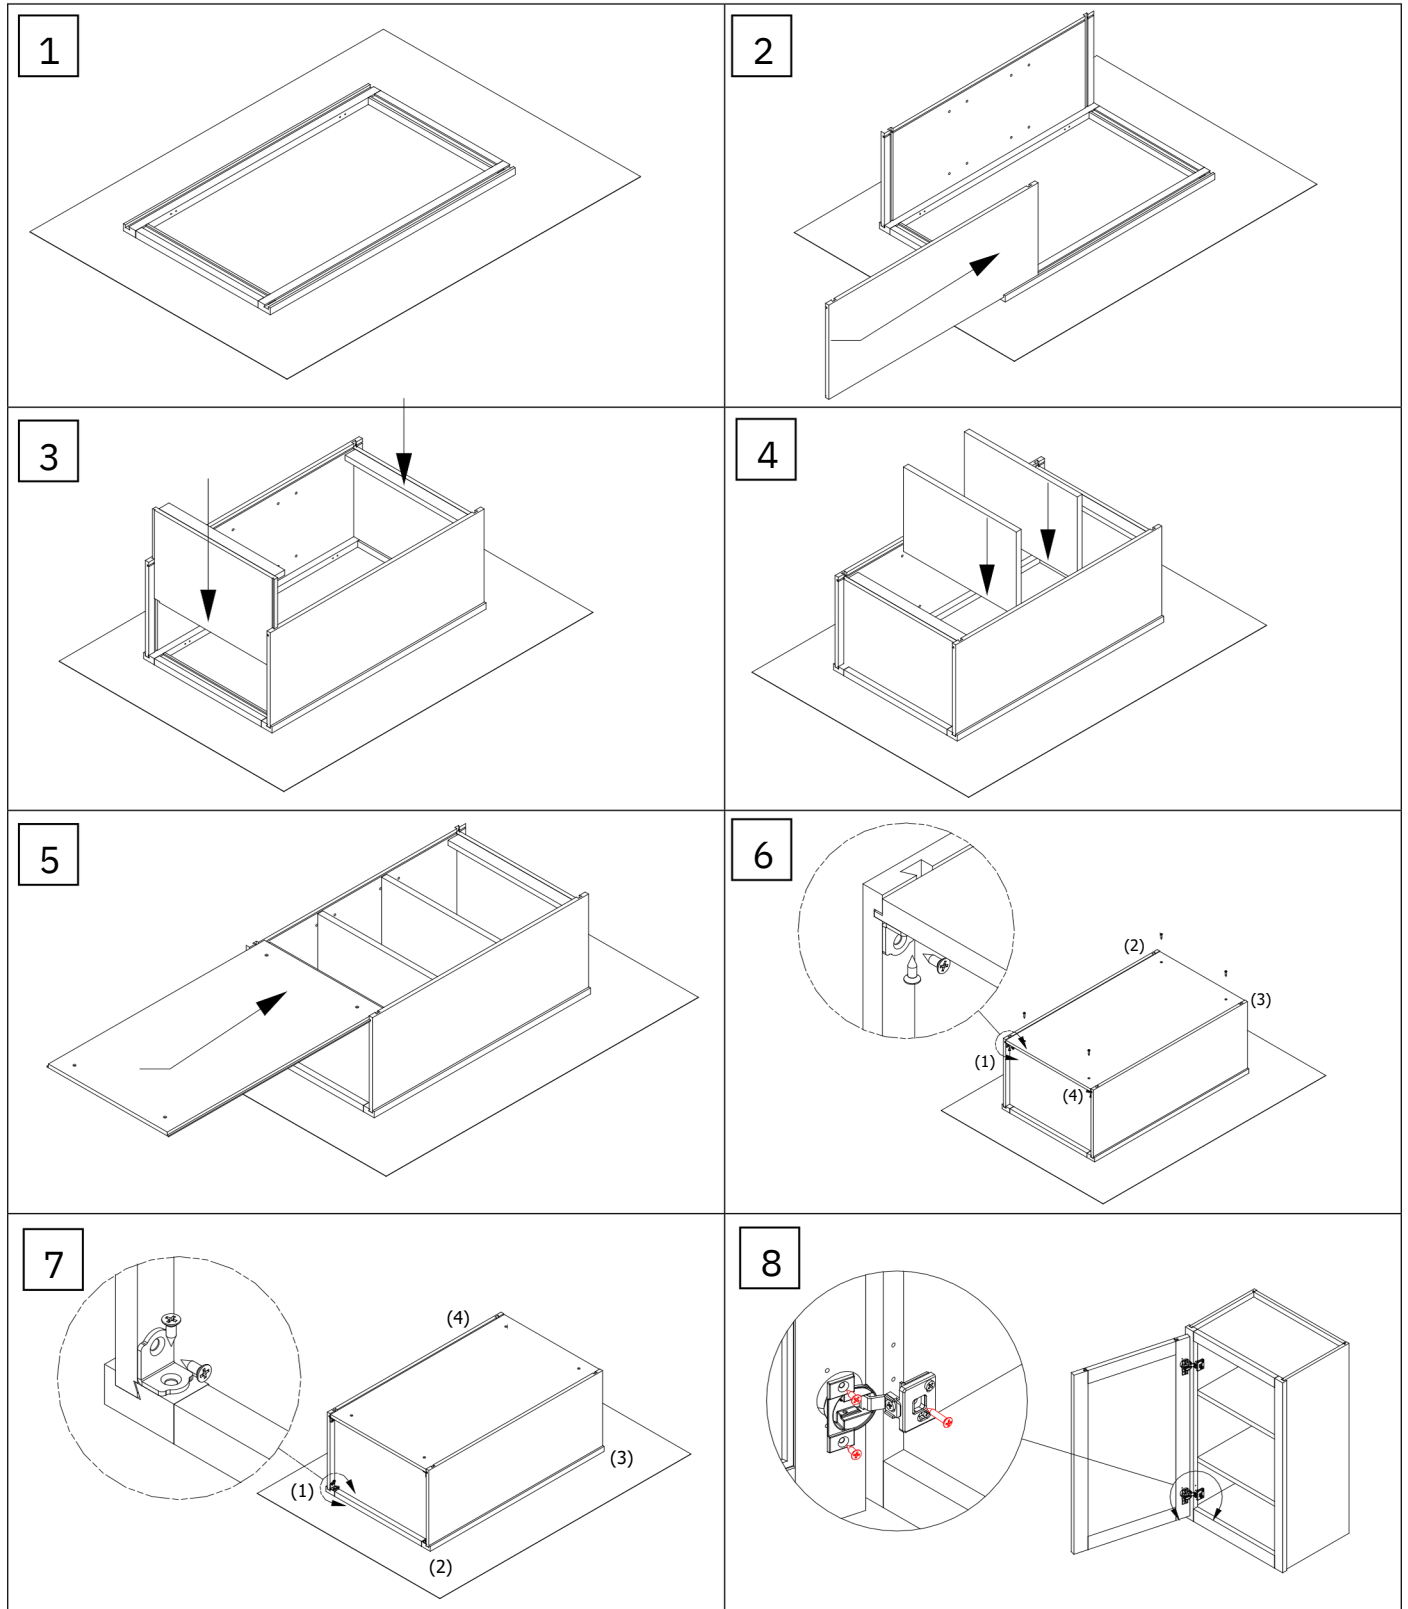










Tall Cabinets Assembly Instructions

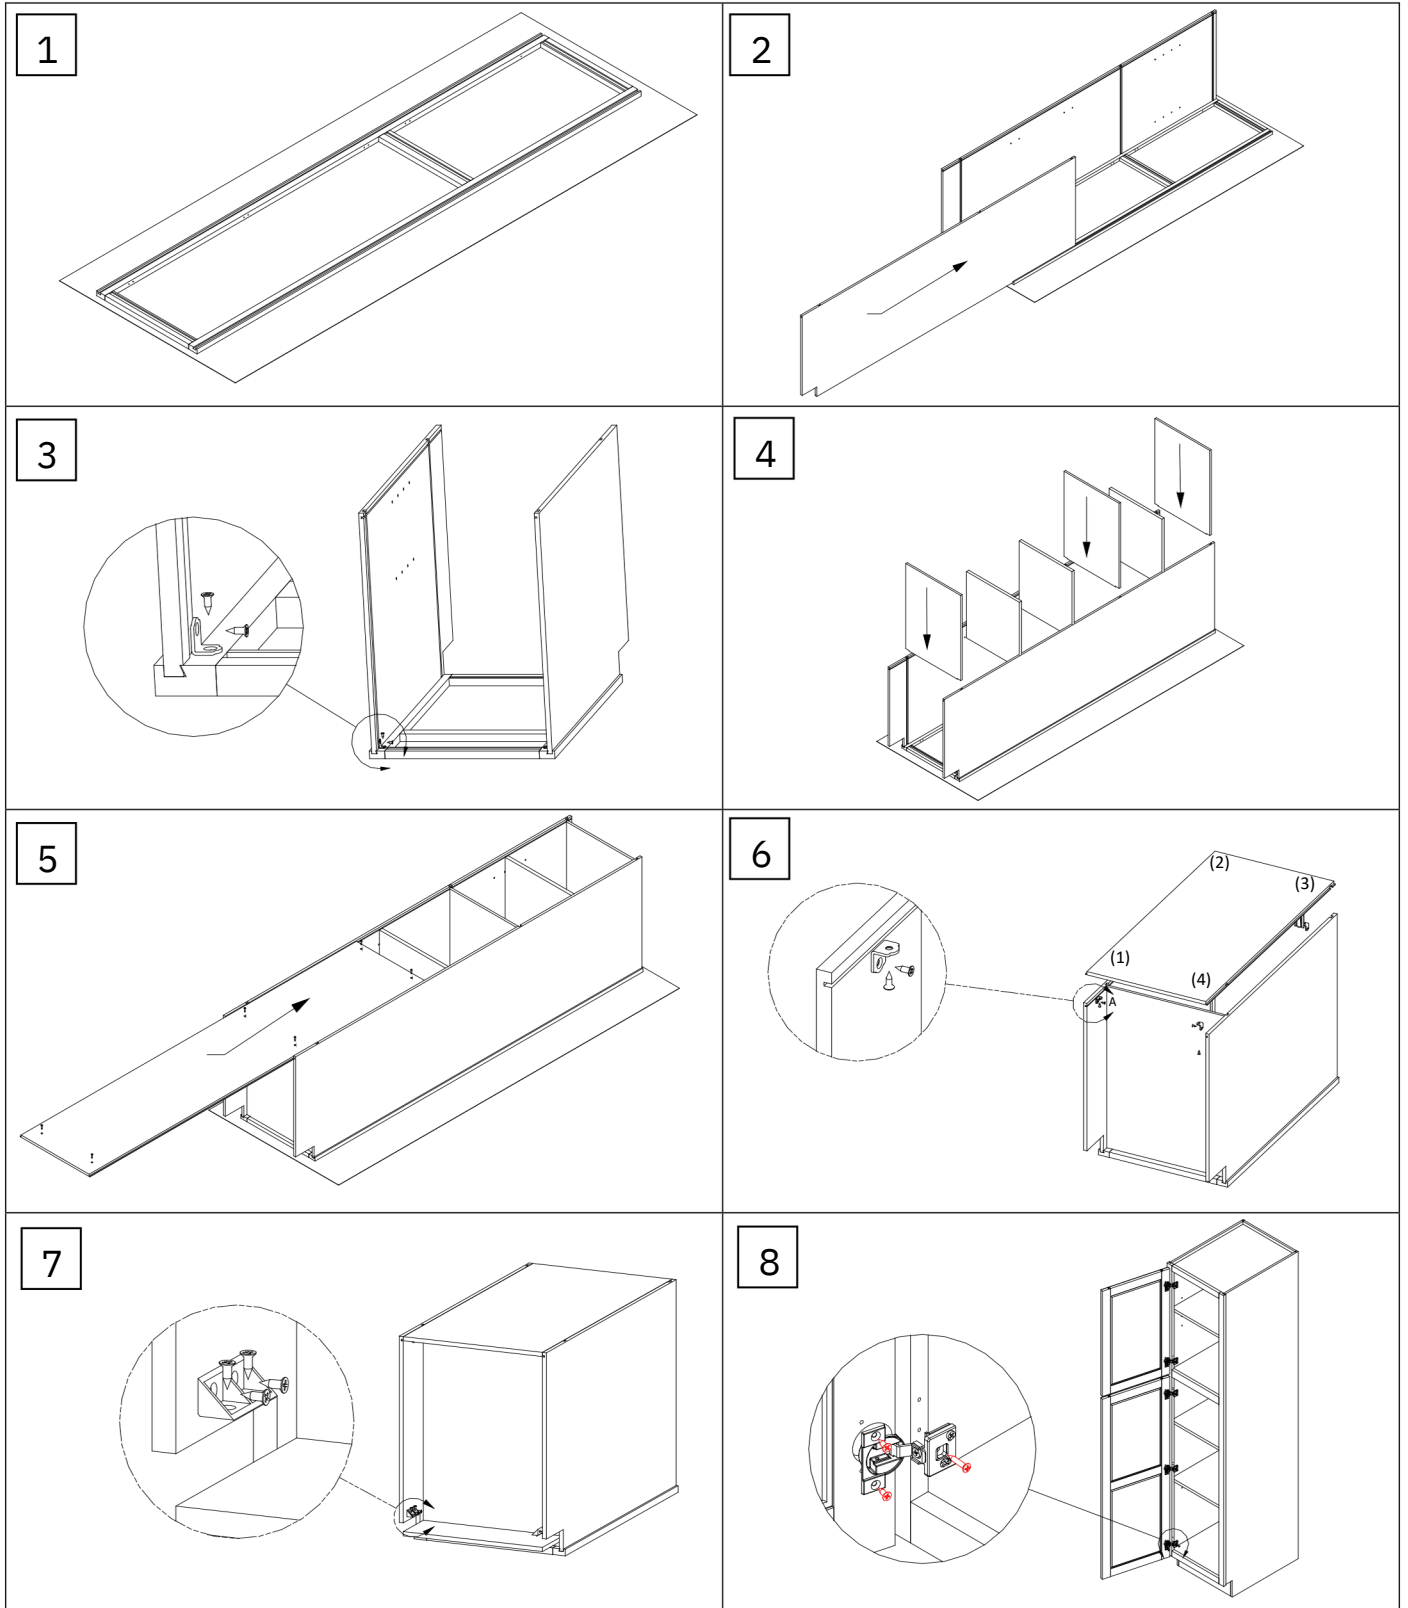


WDC
Assembly Instructions

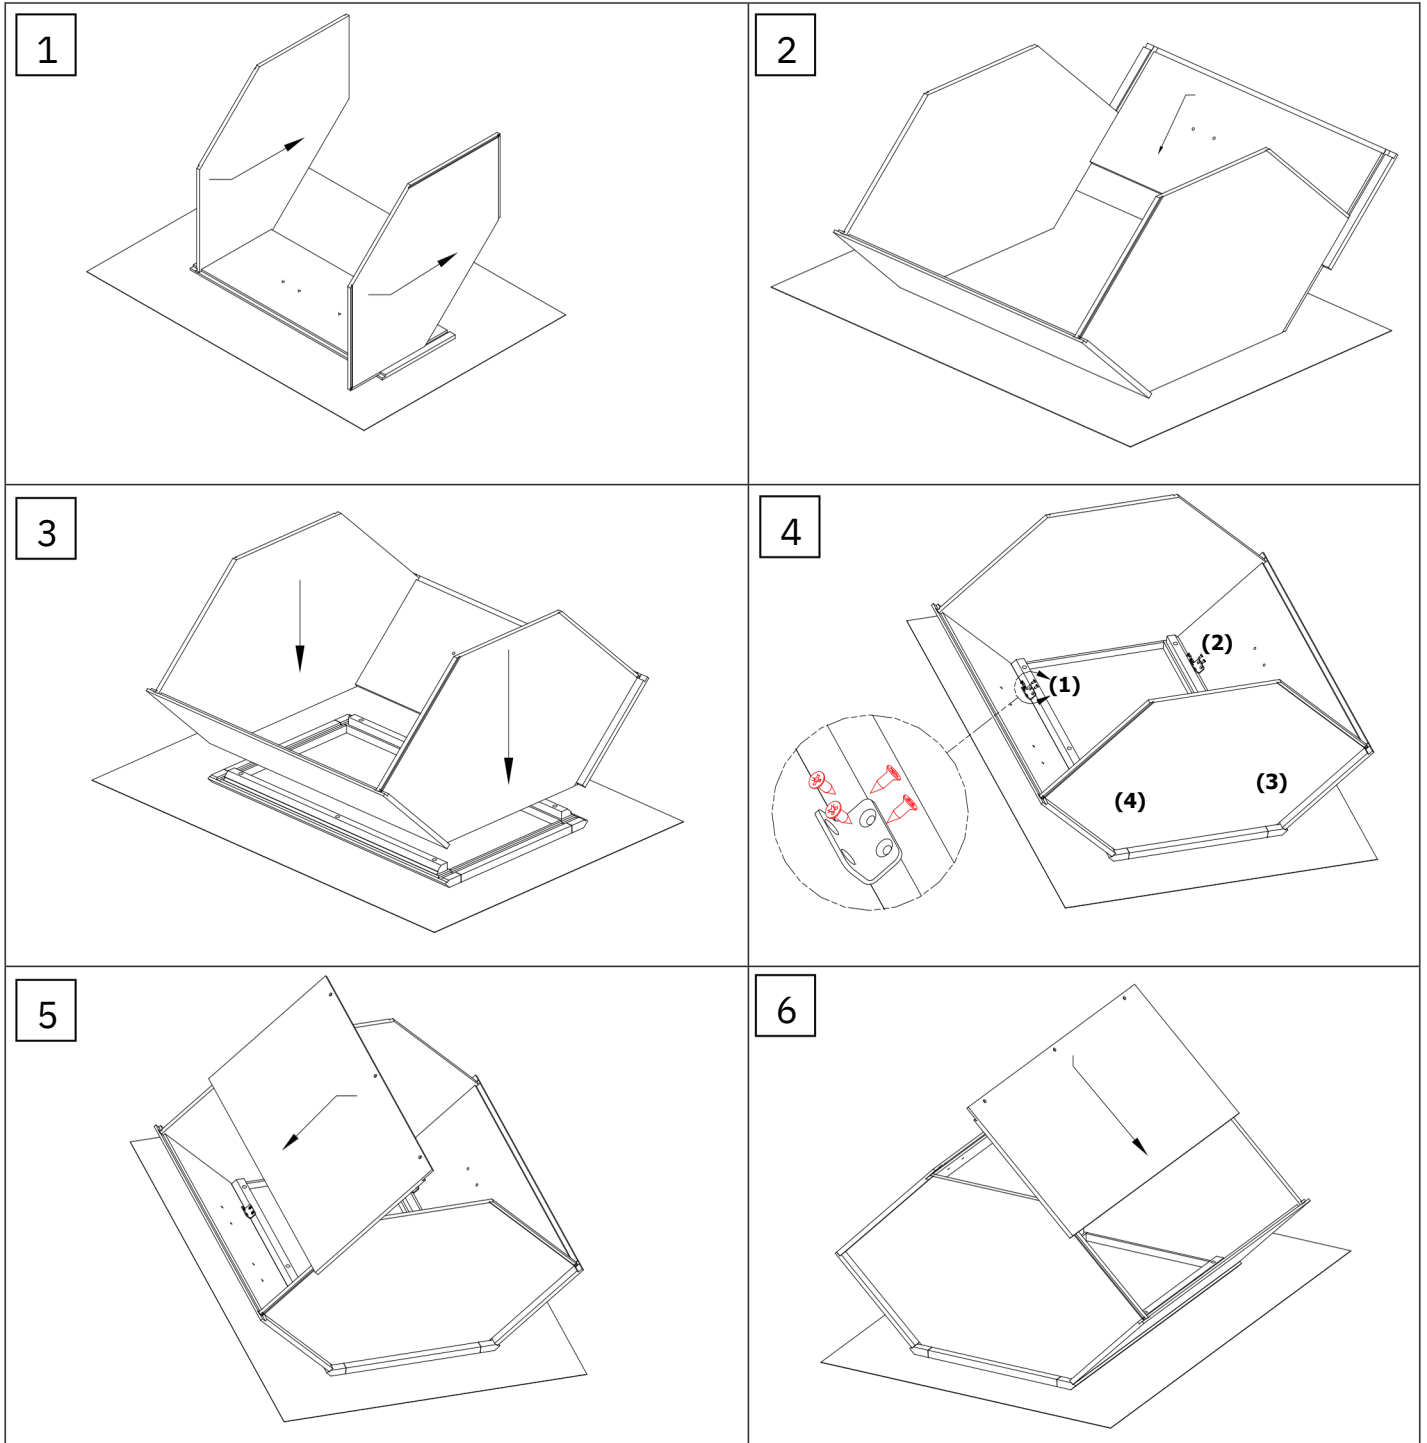


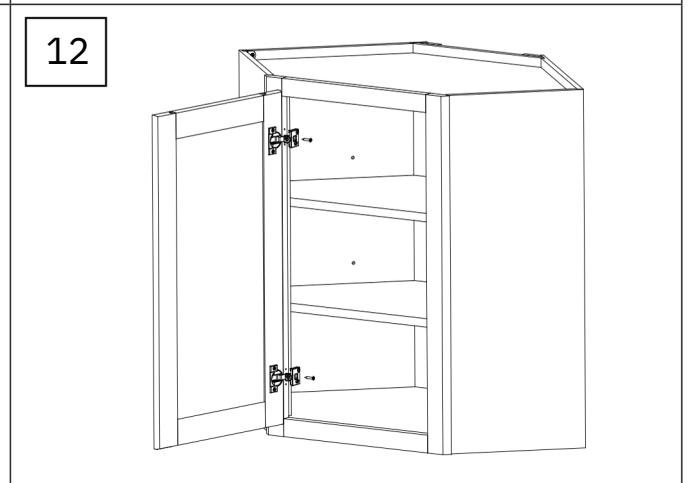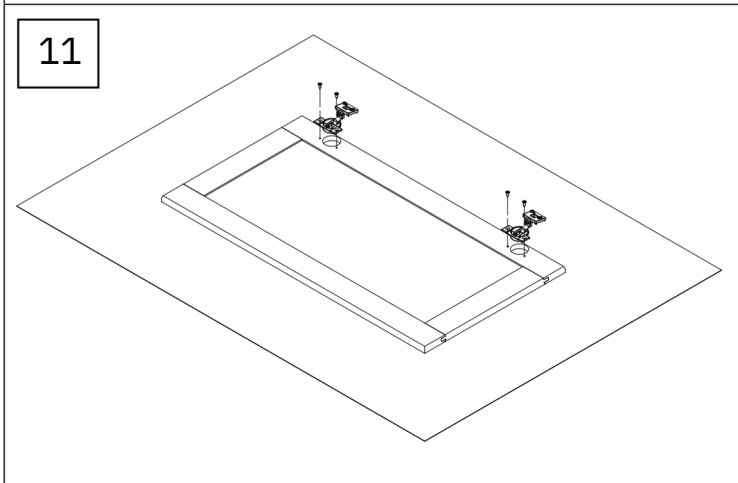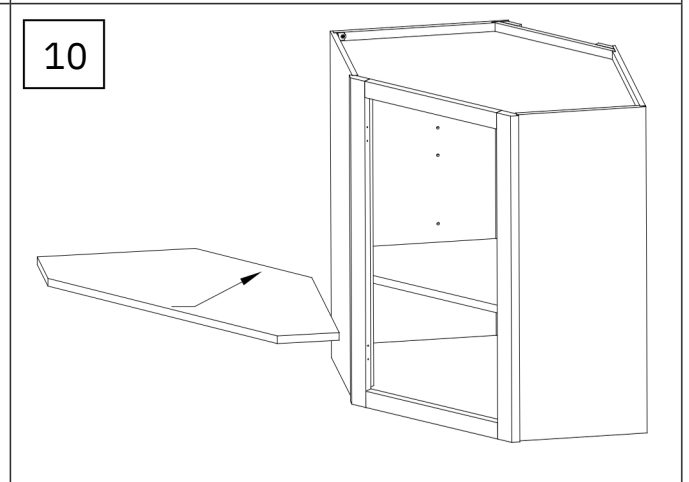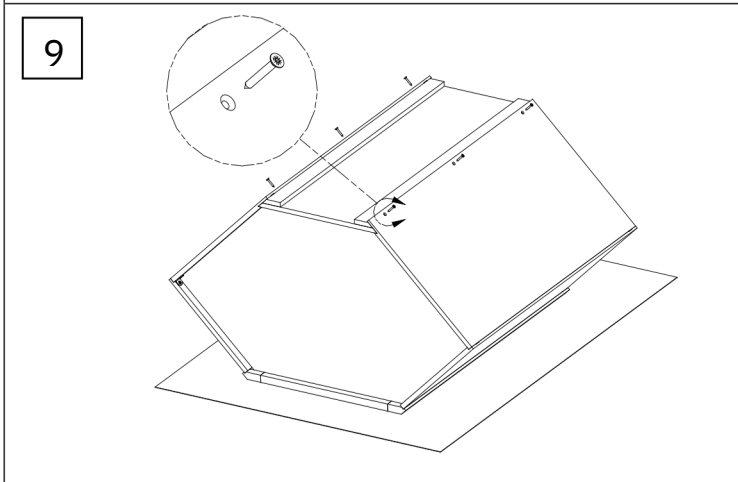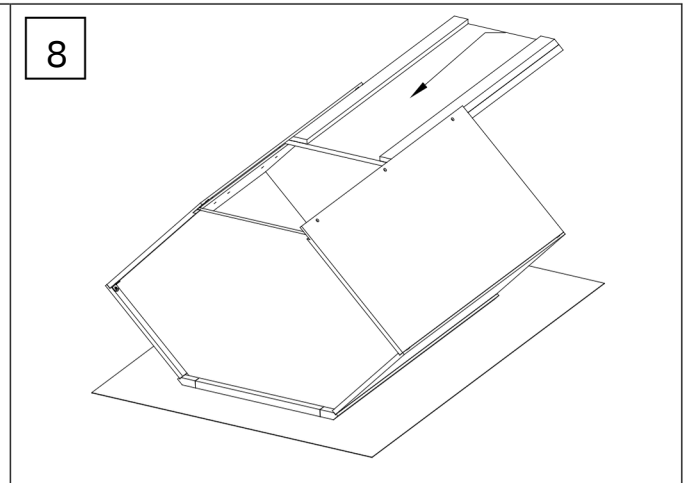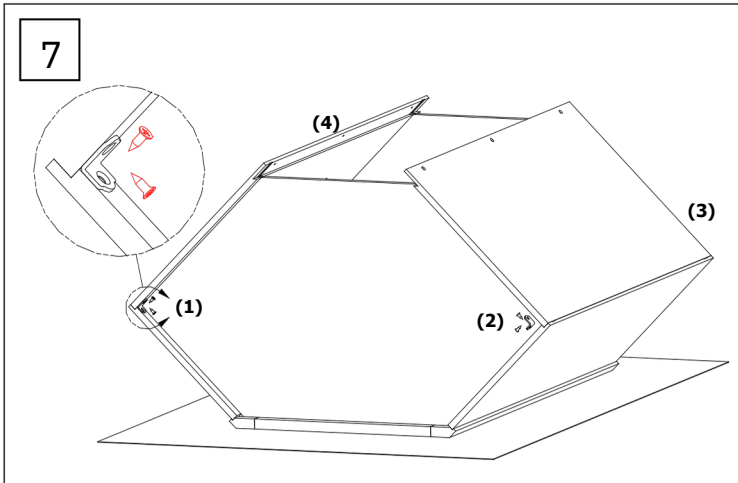


Square Corner Wall (SCW) Assembly Instructions

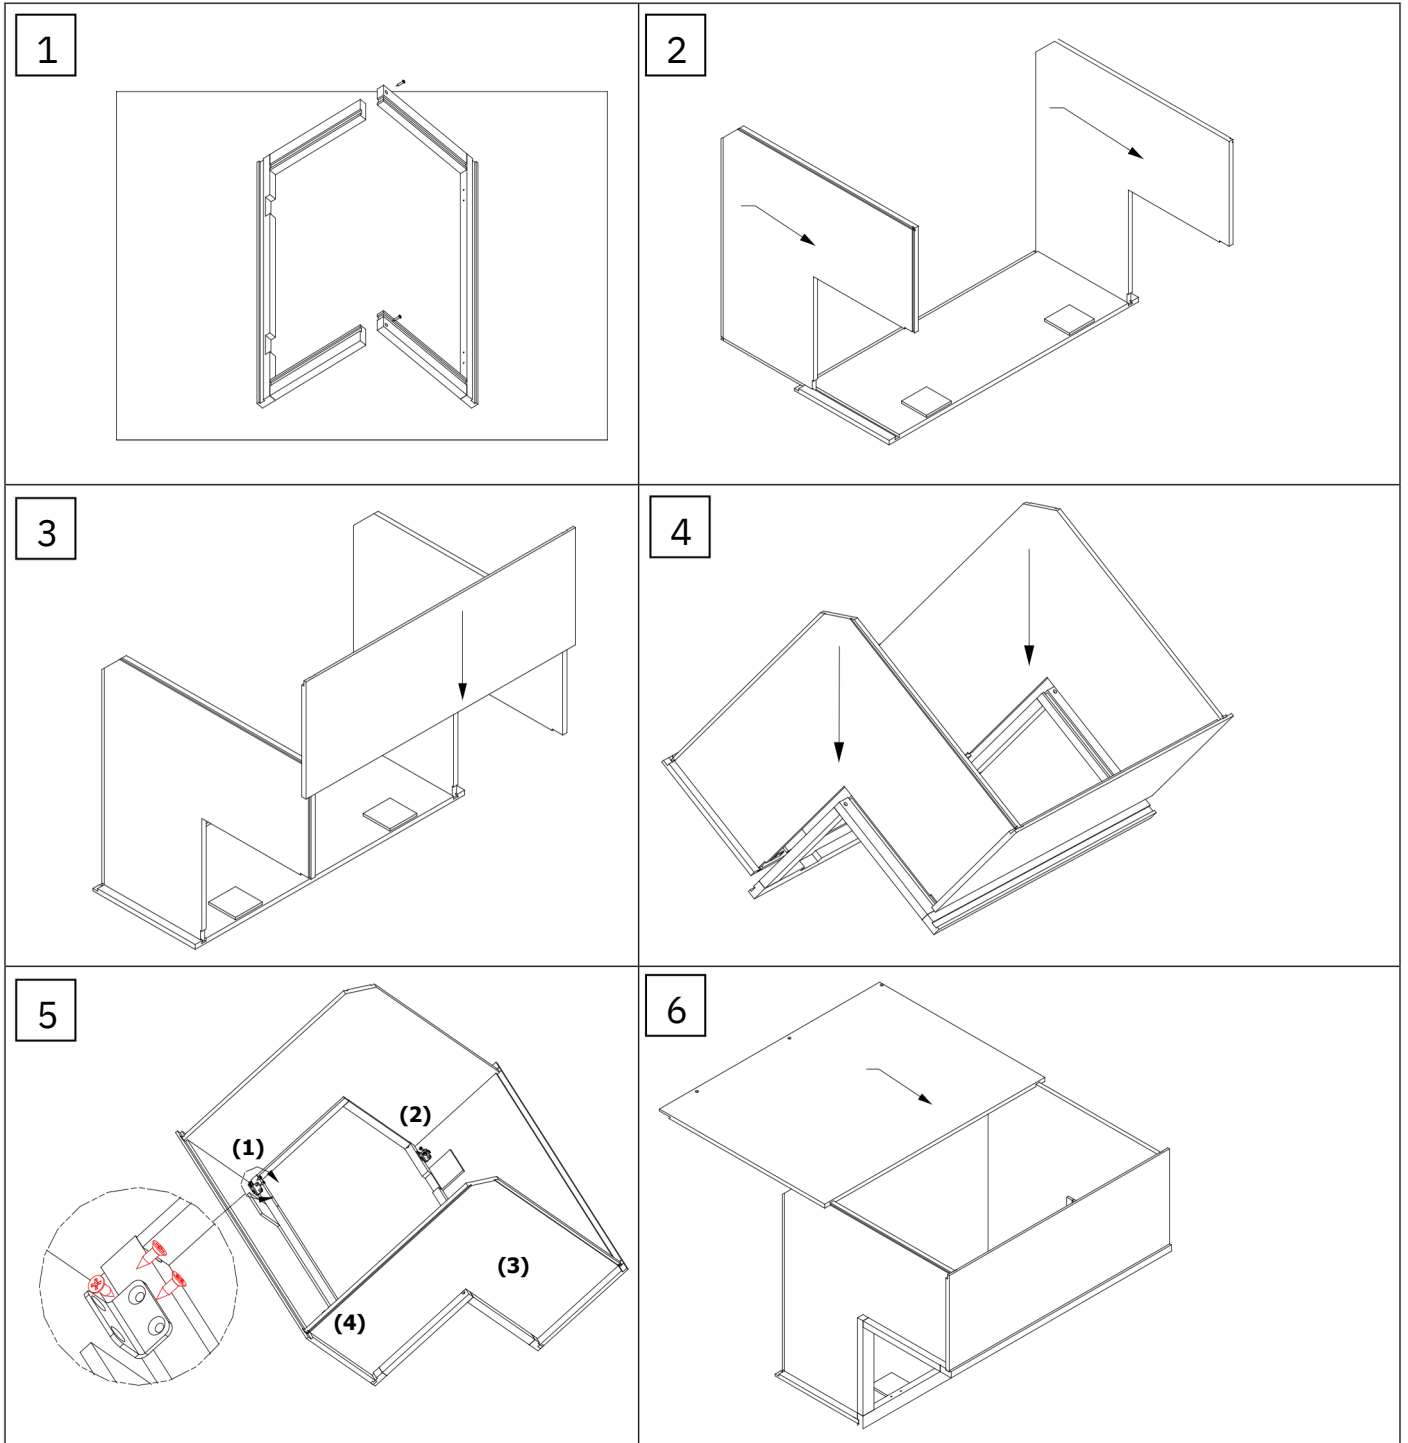


7

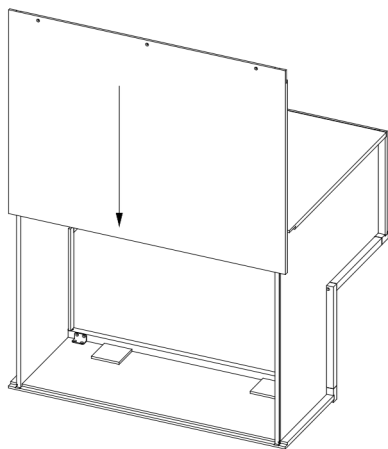


8

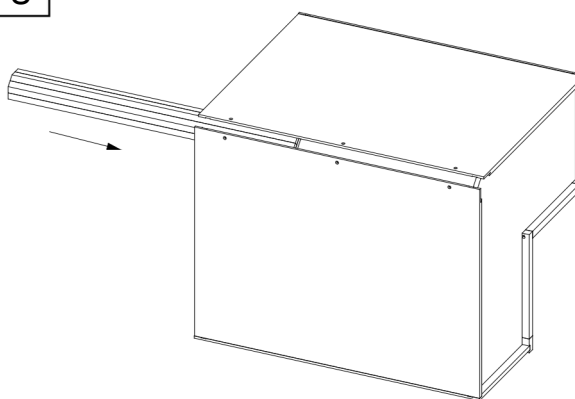


9

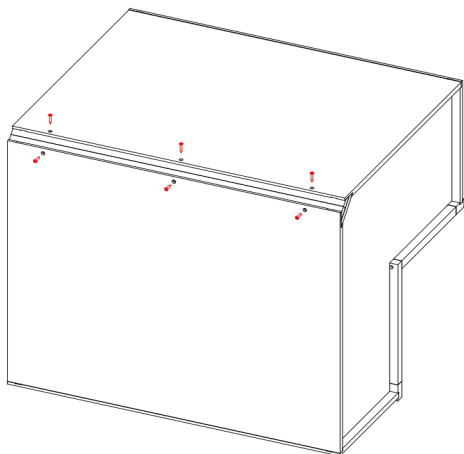


10

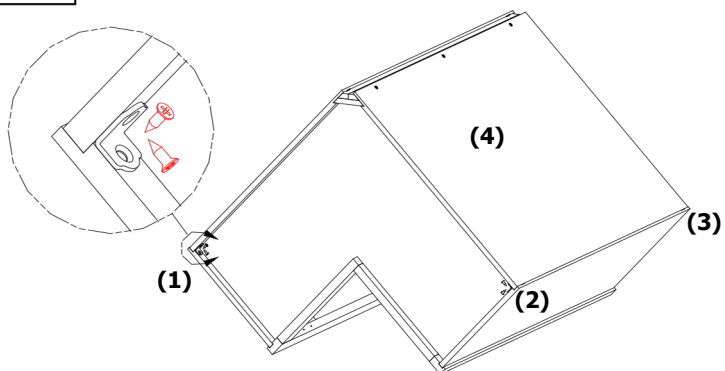



11

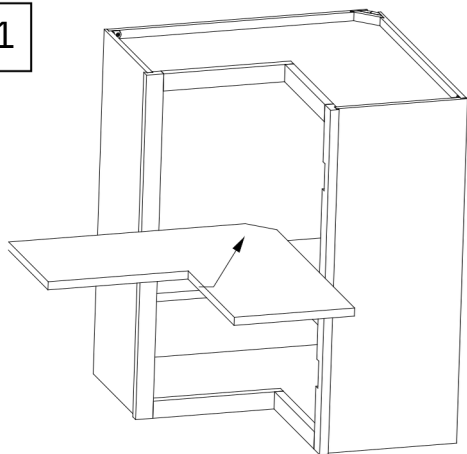


12

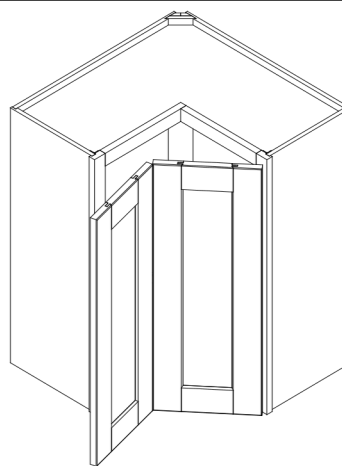


Vanity with Drawers Assembly Instructions

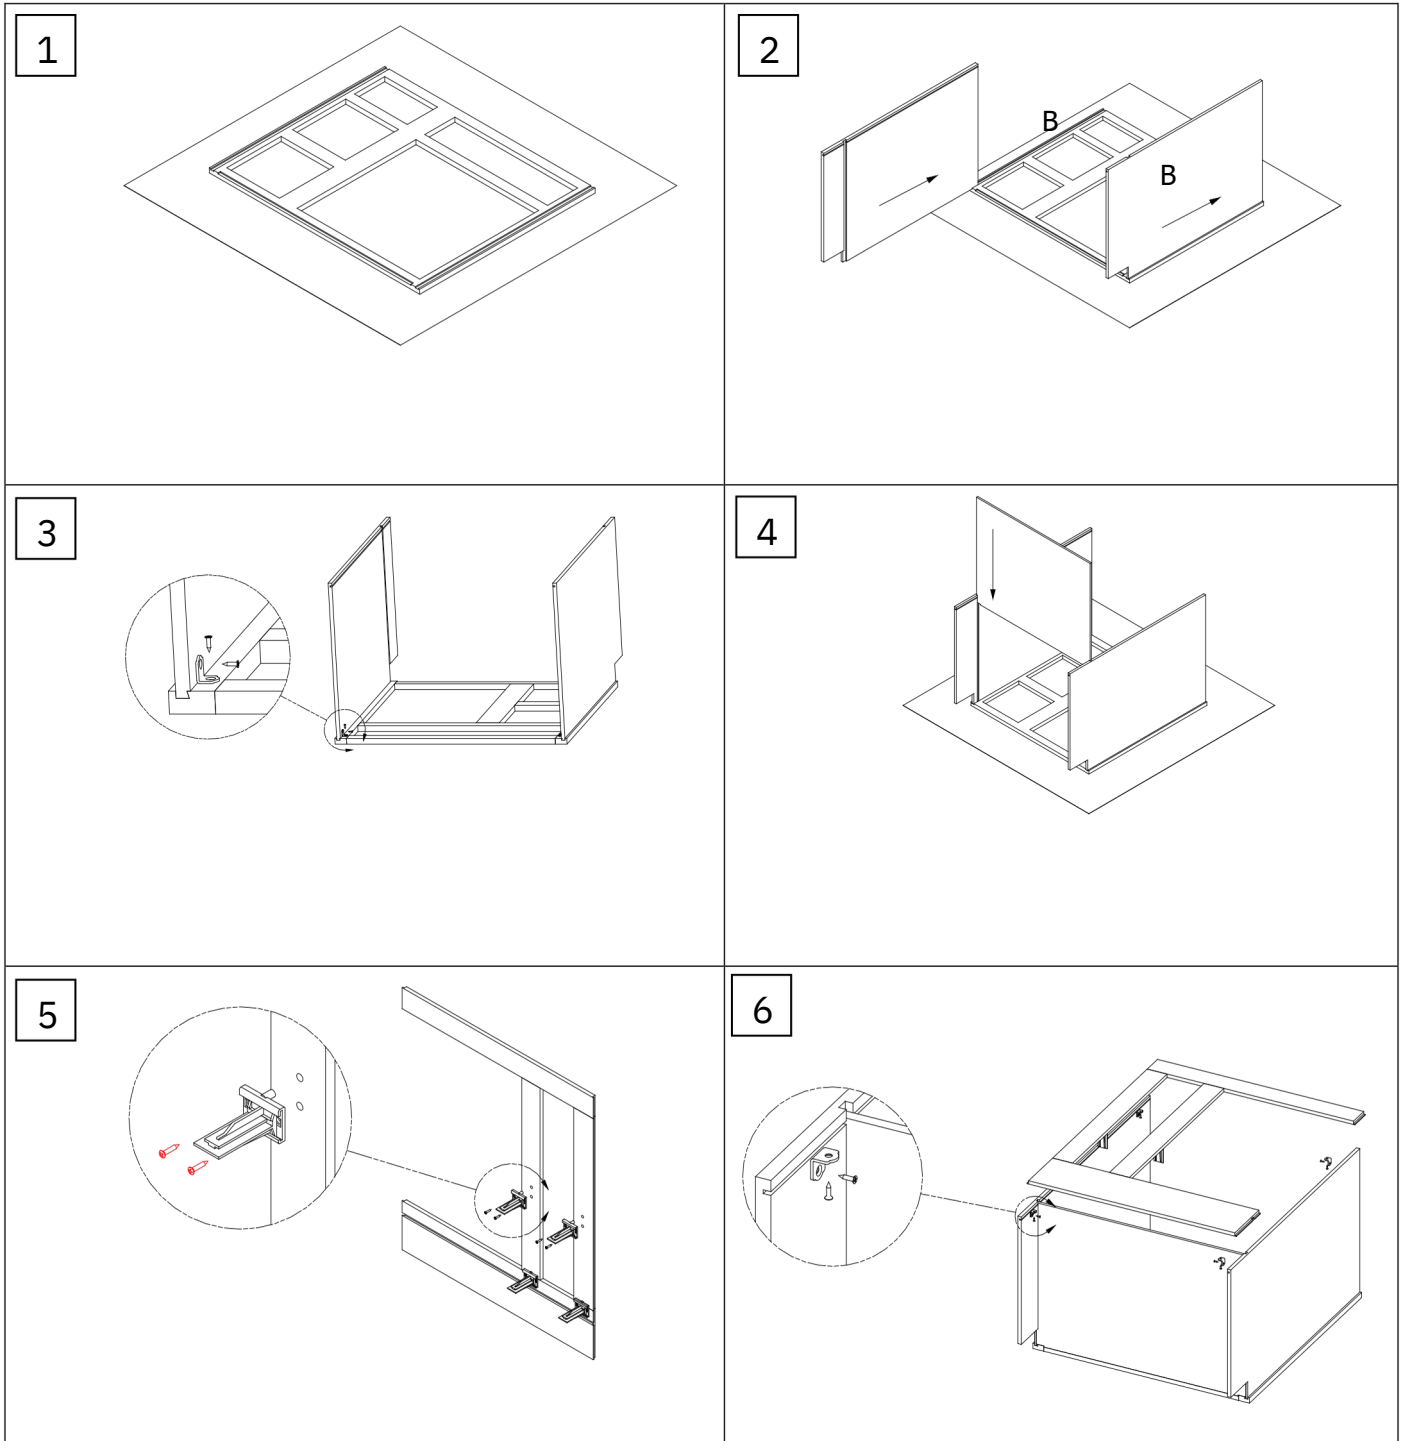


7

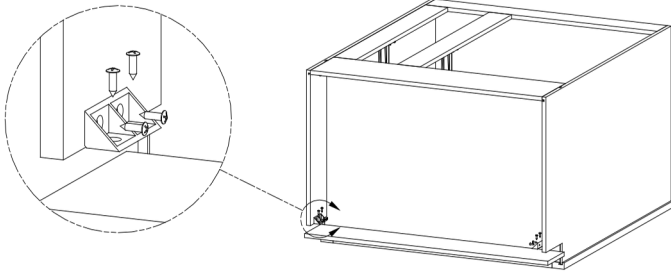


8

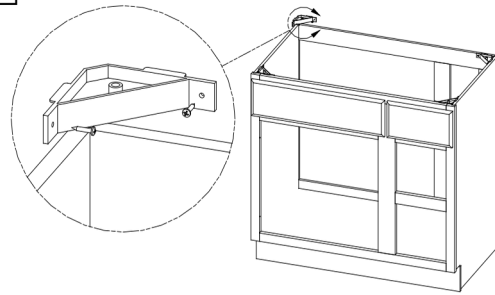


9

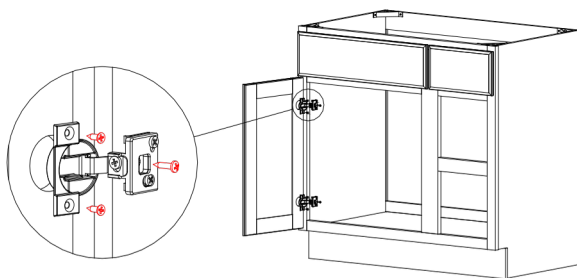


10

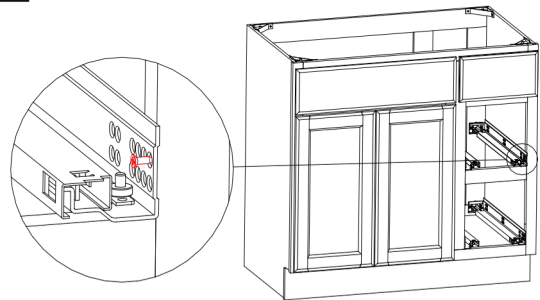


11

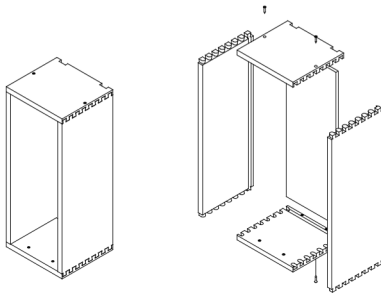


12

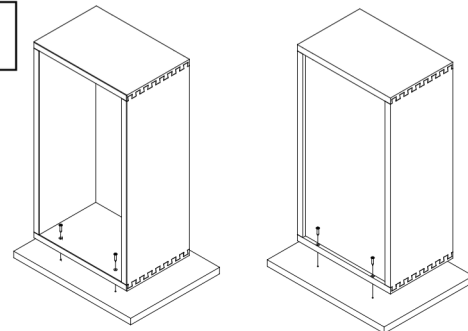

13

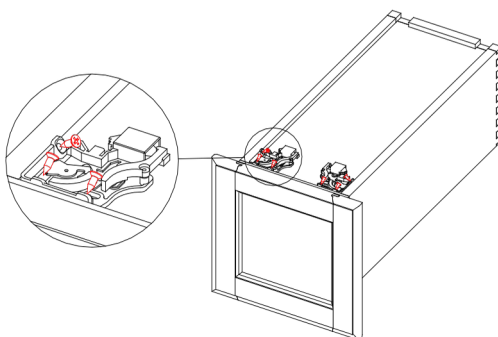

14

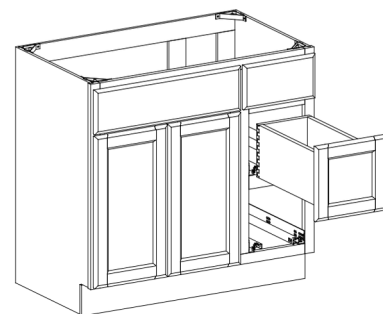



ROLLOUT TRAY INSTALATION TIP

AFTER FULLY ASSEMBLING A BASE CABINET, PLEASE READ THE FOLLOWING INSTRUCTIONS FOR HELPFUL SUGGESTIONS ON ROLLOUT TRAY INSTALLATION.

1. INSTALL DRAWER GLIDE BOOTS IN THE PREDRILLED HOLES IN THE BACK PANEL OF THE CABINET AND SCREW INTO THE BACK PANEL WITH THE SCREWS PROVIDED IN THE KIT.
2. INSERT THE BACK END OF THE GLIDE RAILS INTO THE GLIDE BOOTS.
3. ATTACH THE FRONT END OF THE RAIL GLIDES TO THE INSIDE EDGES OF THE CABINET FACE FRAME WITH THE ¼" SCREWS PROVIDED.
4. ATTACH THE UPPER HALF OF THE GLIDES TO THE BOTTOM OF THE DRAWER BOX WITH ¼" SCREWS.
5. HOLDING THE FRONT END OF THE DRAWER BOX TILT THE BACK END OF THE DRAWER BOX AT A 45 DEGREE ANGLE.
6. PLACE THE WHEELS ON THE DRAWER BOX HALF OF THE GLIDES BEHIND THE WHEELS ON THE GLIDE RAILS ATTACH TO THE CABINET.
7. SLIGHTLY ROLL THE DRAWER BOX INTO THE CABINET AND LAY FLAT AS YOU DO SO. ONCE LEVEL THE ROLL-OUT DRAWER BOX WILL ROLL TO THE CLOSED POSITION.

ADDITIONAL INSTALLATION INSTRUCTIONS FOR OAK ISLAND AND COLONIAL MAPLE ONLY

******* DO NOT INSTALL ROLLOUT TRAYS WHERE IT WILL MEET THE DOOR HINGE, INSTALL ABOVE OR BELOW DOOR HINGE. *******

8. ON THE SIDE OF FRAME WHERE THE DOOR HINGE IS, BEFORE SCEWING RAIL TO FRAME USE A SHIM OR THIN PIECE OF MATERIAL AND INSERT IT BETWEEN THE RAIL AND FRAME. (After installation this will move the rail out enough so when the rollout is being slid out it does not hit the door).
9. IF THE ROLLOUT STILL HITS THE DOOR YOU CAN ADJUST THE DOOR OUTWARD BY ADJUSTING THE HINGES.