



### 1) MEASURE THE BRACKET PLACEMENT

Review the measurements on the next page to place the brackets properly on the back of the B09 cabinet. Screw them onto the back and continue to build the B09 cabinet.

### 2) ASSEMBLE THE B09 CABINET

Download the BILT app for 3D assembly instructions.

SCAN FOR BILT 3D INSTRUCTIONS



POWERED BY BILT INTELLIGENT INSTRUCTIONS®



### 3) SPICE RACK INSERT

Place the additional shelves & rails to the side.

### 4) SECURE SLIDES TO B09

Place the slides into the brackets and secure them to the sides of the B09. Use a level when securing the upper slide. Adjustments may be needed later.



### 5) INSTALL DRAWER CLIPS

Install the drawer clips to the underside of the insert. Line up the insert to check fitment.

### 6) ATTACH INSERT TO DOOR

Check for even spacing when attaching the insert to the door. Secure using the screws. View the next page for measurements.




### 7) ADD ADDITIONAL SHELVES

Remove the spice rack from the cabinet to insert the additional shelves.



### 8) INSERT THE RACK AND CHECK FITMENT

If the door's alignment is off, you may need to adjust the upper slide. If the upper slide bracket is moved up or down, ensure the slide remains level by adjusting the front of the slide where it attaches to the face frame. See next page\*

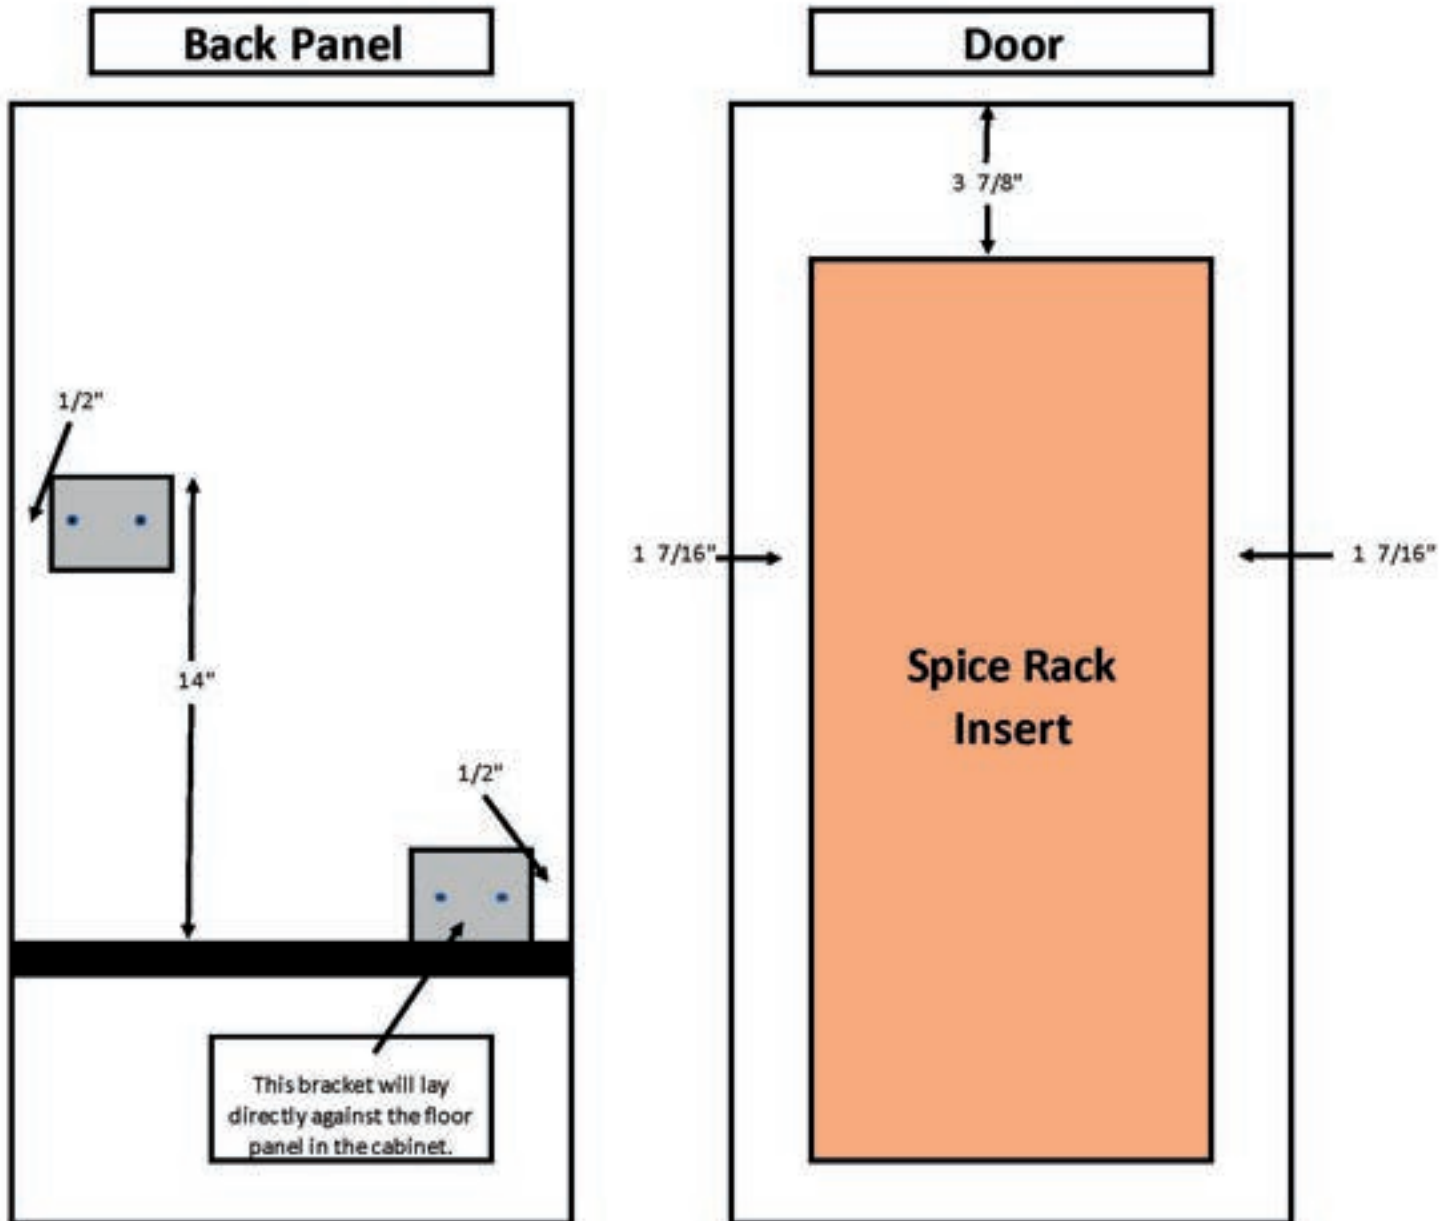

**\*IF ADJUSTMENTS ARE NEEDED**

You may have to unscrew from the face frame of the cabinet and shift the screw placement up or down from the original placement.

